Section 7

Floorboards 55-63

Foot Pegs and Mounts 66-78

Forward Controls 41-54

Frames..... 2-3

Frame Related 4-6

Highway Bars 22-25

Kickstands 26-34

Motor Mounts 35-40

Lowering kits 16-21

Progressive Suspension 15

Shocks 15-21

Swing Arm 7-14

Tool Box 4


Frame







Spark Plug Box
Clamps onto the rear frame tube just behind the oil tank and will house two spare spark plugs. This part will fit all Big Twin swingarm frames.
2315 91775-51

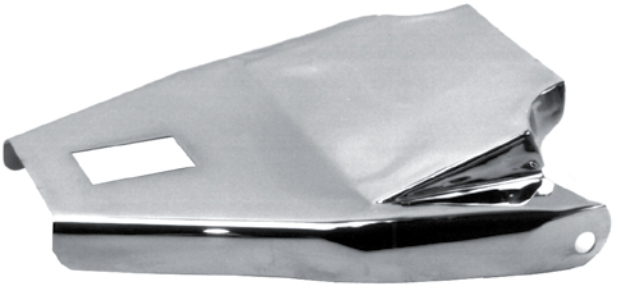


Chrome FL-FXST Frame Cover
Used with seat T and piston kits or other custom applications.
45404 1986-99 FL-FXST

Swingarm Frame for Road Kings 1998-06
Stock style 1994-06 frame with a 26° rake. Accepts Twin Cam 88 and Evolution engines with matching Touring model transmissions. Accepts all stock sheet metal, forks and suspension.
99927 Frame only 1998-06
99216 Stock style raw steel rear swingarm for 2000-01 Touring models with ¾" diameter axle only



FXST Weld-on Frame Brackets
27318 Signal module 1991-99
27319 Circuit breaker

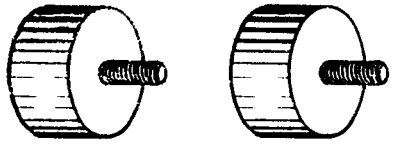

Frame Bumper FXST-FLST
Bumper has a 1/4" x 20 thread. Fits 1987-99 and replaces 11451.
23031 (Pair)



Grease Fittings 5/16 x 32 Thread

PCP	Description
10526	Chrome 1938-on (9851) (10 pack)
10511	Zinc 1938-on (9851) (10 pack)
10513	Zinc, angle 1938-on (5 pack)
10515	Zinc 1979-84 (10 pack)

Well Nuts

PCP	Thread	Type (10 pack)
23032	6/32	Headlight (5210)
23033	10/32	FXST Module (5207)
23015	1/4-20	FXR 82-94, XL 91-03, FLSTC 90-93(8099)



V-Twin Replica Frame



FXST-FLST Replica Frame
An authentic reproduction of 1987-99 model. Features include forged parts in neck, front & rear motor mounts and rear strut bars. Formed stampings which have been accurately blanked and pressed, are used in the top motor mount and seat area. This frame accepts EVO engines, 5-speed rigid mount transmission, stock swing arm and 1984-on “Flatside” gas tanks. Neck includes tab for pad lock and a 17 sequence number boss.
99850 Frame front section










Twin Cam 88 FXST, FLST Replica Frame
Reproduction of 1987-99 type frame with forged parts in neck, front/rear motor mounts, rear strut bars and includes rear engine mount bracket. Top motor mount and seat area feature accurately blanked and pressed formed stampings. Frame accepts TC 88 engine, 5 speed rigid mount transmission and 1984-on flat side style tanks. Neck includes tab for padlock and number.
99865



Rear Swing Arm Bearing Remover/Installer
For use on FXST, FLST 1986-99.
26127

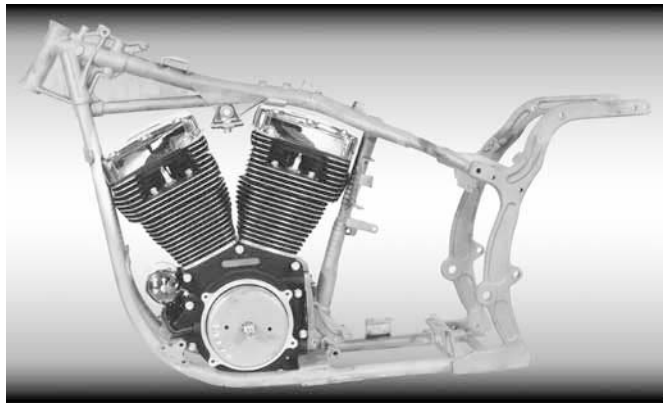

Frame Related



Left Side Tool Box Kit for FXST 1984-99
This kit fits FXST 84-99 and FLST 1990-99. Kit includes tool box, mounting bracket and hardware. Replaces OEM 64207-89. Will not work with dual exhaust.

85200 Complete kit with chrome bracket
27034 Left side bracket (black) 1986-99
85201 Chrome tool box only



Right Side FXST-FLST Tool Box Kit 1986-99
Chrome ribbed replica of early box including keys, mount bracket, foot peg spacer and hardware. Replaces factory accessory 64201-85B.

FXST Tool Box Kit
85204 Toolbox and right side mount
3602 Right side bracket only, black.
27034 Left side bracket only, black.
27035 Relocation bracket (64210-90)



Tool Box For 2000-05 Softail
PCP **Side**
21765 Left (64938-00)



FXST, FLST Rear Fender Extension 1986-on
Replaces stock plastic extension.

27287 Curved chrome 1986-99
27309 Stainless 2000-07 (60476-00)
27359 Chrome 2000-07



Toolbox Kit
Chrome, ribbed tool box kit includes 2 keys, mount bracket, footpeg spacer and hardware.

2008-on FXST/B/C, & FLSTF
85206* Right side kit (64227-08)
85207 Left side kit (64230-08)
*Note; If used with stock passenger footpegs OEM spacer kit # 49352-00 is required (available from OEM dealer)

2006-on FXD, FXDWG
85208 Right side kit







Colony Chrome Swing Arm End Plates
Chrome plated end plates are replicas of OEM 41112-79. Fits FXR 1981-94 and FLT 1979-on.
72090



Left Side Frame Cover for FXR
This chrome side cover fits FXR models 1984-94. Mounts below the stock left side frame cover providing a clean all chrome look. Mounting hardware included. (47309-88T)
3169



Chrome Side Covers for FXR 1984-94
Chrome-plated steel side covers to replace the standard plastic covers. Fit all FXR-FXRS models from 1984-94. Replaces (66351-82 (left), 66356-82 (right).
3243 Complete set



Chrome Engine Skid Plate for FXR
This chrome plated skid engine plate is designed to protect engine cases from road hazards. It covers the unprotected area on 1982-88 FXR models.
4903



FXR Swingarm End Cap Covers
Chrome covers for the swingarm pivot end caps on the 82-94 FXR. This is an easy way to dress up the sides of the bike.
44320 (47850-88T)



Swing Arm Chrome Plugs
Fits XL 89-on and FXD 94-05.
21021 67865-89 (5 pk)

FXST Frame Related



Wide Drive Softail Opitional Parts

Optional Parts

76457 1/2” Primary Spacer
73560 1/2” Longer Compensator Shaft
73609 1/2” Longer Sprocket Shaft Nut





Chopper Frame Components

Order Components Separately:

PCP	Item
59521	Motor spacer plate 3/4” for 200 series tires
59693	Chrome oil tank FXST 86-99
59694	Raw oil tank FXST 86-99



Chrome steel strut bars allow use of a 8”-12” wide fender on FXST frames

99227



Paughco ‘Easyride’ Frame Accessories

PCP	Description
75003	Aluminum swingarm rock guard
75004	Wide aluminum swingarm rock guard



Mini Shock for Seat Post

Will replace BT seat post in 1936-80 frames. Includes adapter clevis to connect to “T”. 250 Pounds capacity.

21774



Axle Kit for Retro Rigid Frame


Rigid rear axle kit has a 11-¾” bearing surface length, ¾” O.D., nut, spacer and washers. Spacers may have to be cut to length. Custom application for belt driven rigid frames.

43240



Chrome FXST-FLST Full Frame Covers
Fits frames 1986-99 to cover frame casting a pivot bolt head. Top fits under strut and is held on by the footpeg mount bolt.
45429 Chrome plastic



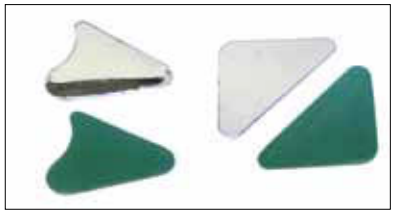

Frame Insert Set (Chrome)
Covers neck area of Big Twin frames 1948-E88 & Softail 84-98, with key lock. Attaches with adhesive pads (included). Sold in pairs.
45309



Chrome Rear Frame Covers for Softails®
These custom rear frame covers are used to hide the frame castings on the rear swingarm pivot section on stock belt drive frames. They are held in position by the exhaust pipe brackets and fender struts and are easily installed in minutes.

PCP	Fits
45080	Rear frame covers 1986-99 (set)
4938	Pivot bolt covers 1986-99 (43897-86) (pair)



Chrome Tail Spurs
Dress up rear castings on 1986-99 FXST, FLST models. Contour steel covers fit behind adjusters to protect paint when axle is removed. Chrome adjuster nuts supplied.

PCP	Item
21823	Spurs
43103	Adjuster kit



FXST Swing Arm



Colony Chrome Swing Arm Covers FXST 86-*

Chrome plated covers add a smooth finished look when easily installed with a set screw. Sold in sets of 2.

72122 Softail 2000-07 (except FLSTF, FXSTD)
72141 Softail 1986-99 (except FLSTS)
72780 Softail 2008-on (except FXCW, FXCWC)



Swingarm Pivot Bolt Covers for Softail®

A selection of chrome-plated covers for the swingarm pivot bolts on all Softail® models (except Fat boy®) from 1984 to present. These cover sets are functional as well as attractive and are available in two different styles. They are held in place with set screws and look great when installed in conjunction with PC #45080 chrome rear frame covers.

Sold in pairs.

8938 Smooth style 1986-99 (43897-86)
8939 Amber reflectors 1986-99
44061 Smooth style 2000-on (43462-00)



Softail Transmission Mounting Plate 1986-99

27121 Black (47698-86B)
27122 Chrome



T/L Billet Swingarm Pivot Bolt Cover Kits


Chromed billet aluminum bolt covers feature a raised profile with engraved emblem. Sold in pairs.

PCP	Application
61227	All 1984-99 Softail models except FLSTS (43821-95)



FXST Diecast Rear Pivot Covers (pairs)


44318

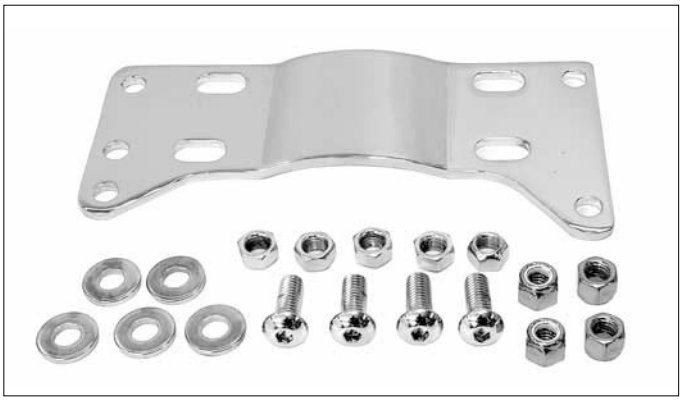

Chrome FXST Transmission Plate Kit 1986-99

Kit includes transmission mount plate and installation hardware.

27127 Kit
9866 Hardware only

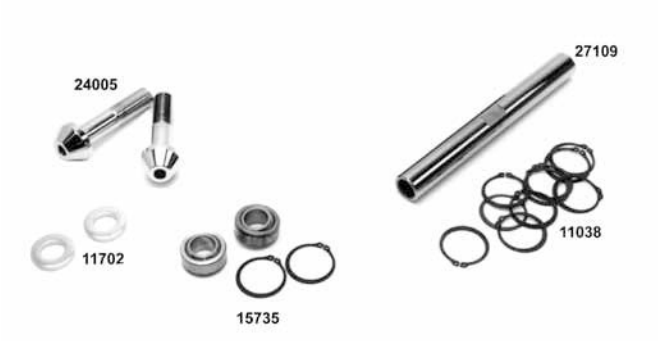

FXST-FLST Rear Pivot Hardware 1987-99

Order hardware separately.

PCP	Item
15735	Bearing kit 84-99 (9076) (4 pc)
11038	Snap rings 85-99 (11158) (10 pk)
24005	Tapered allens 84-99 (4961) (pr)
20520	Lockwasher for above 86-99 (7142)
11702	Washers 84-99 (43283-86) (pr)
27109	Chrome axis tube 89-99 (48031-89A)
43208	Chrome pivot shaft 00-07 (47610-00)



Chrome Pivot Kit for Softail 1987-99

Includes all parts shown.

43117



Swing Arm Pivot Bolt Kit

Chrome plated custom domed head or hex head swingarm pivot bolts and internal tooth lockwashers used on 1984-99 Softail.

72205 Domed head
72215 Hex head






Swing Arm Pivot Kit

Rebuild kit for all Big Twins. Includes all parts pictured.

2966 1973-84 FL, FLH, FX, FXE, FXS, FXWG
43203 1958-84 Special pin only
43255 1985-86 FXWG-FXE-FXB





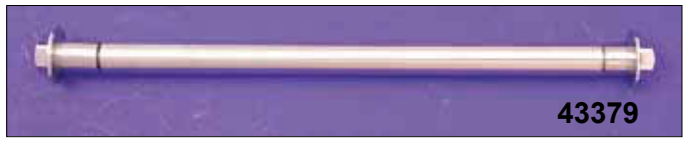

2000-on Chrome Softail Pivot Assembly

Kit includes shaft, nut, and spacers.

43121 Complete kit 2000-06
43379 Flush mount shaft 2000-06
43354 Shaft kit 2000-07
43365 Shaft Kit 2008-on
15753 Bearing only 2000-on (9270A) (each)






Swing Arm Flange Nut

20108 2000-on (7479) (5 pack)

FXST Swing Arm





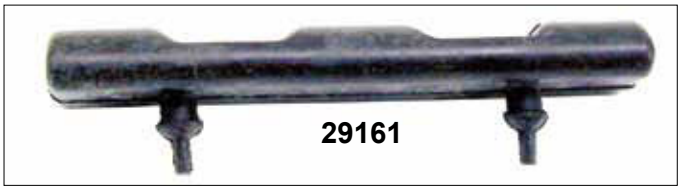




Rear Section Parts Softail 2000-on

PCP	Application
43208	Pivot shaft , chrome (47610-00)
21010	Bushings (48048-00) (pair)
21011	Spacer 2000-06 (48049-00) (pair)
15753	Bearing only 2000-on (9270A)
15764	Bearings with retainers 2000-on
43121	Chrome rear pivot kit with bearings
43256	Chrome pivot kit 2000-06 (47119-02)
11114	Retaining ring (11282)
20515	Left side pivot washer (6535)
20514	Right side pivot washer (6534)
44061	Chrome dome cover set (43462-00)
29161	Bumper (not for Deuce) (11514)



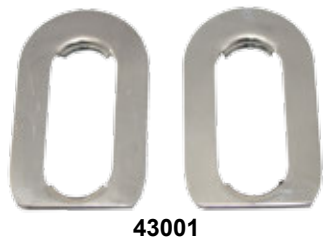

Axle Plates


Made of polished stainless steel to protect axle area. (Pairs)

PCP	Models	Years
43000	FXST-FLST	1984-05
43001	FXR-FXRS	1982-94

Pivot Spacer Sets

4 Piece set fits Softail models.
Zinc finish.

PCP	Application
43027	2000-06
43028	2007
43029	2008-on

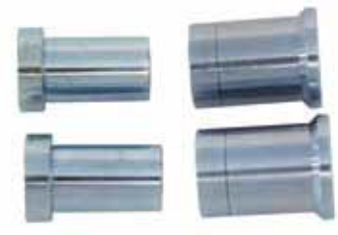



Pike Swing Arm Pivot Bolt Set

Includes chrome pike nuts and studs for 1989-99 Softail.
73649





Rear Fork Bearing 2000-on Softail

15753 (9270A) (sold each)



Rear Fork Parts FXST 2003-on

PCP	Item
20517	Washer (47491-02A)
21013	Nut 2002-08 (47606-02)

FXD Swing Arm





Chrome Swing Arm End Plates & Custom Wheel Adjuster Hardware

Fits all Dyna models 1991-05.
Replaces 41113-90.

72000 End plates & adj. hardware
72001 End plates only (pr)
9987 Adjuster hardware only



15561



43237

43238

43244



43207



43239



43241

FXD Swing Arm Rebuild Parts


For all 1991-on Dyna. Complete kits or replacement parts as needed.

PCP	Item
43207	1991-99 Complete kit
43239	2000-05 Complete kit
43241	2006-on Complete kit

Replacement Parts


12645	1991-99 Nut (7734W)
14519	1991-on O-ring (11139)
21016	1991-on Dust shield (41585-90)
15561	1991-03 Bearing assembly kit (47082-81)
21017	1991-on Spacer, left hand (47496-90)
21018	1991-on Spacer, right hand (47499-90)
21015	1991-on Washer (47565-90)
18710	1991-on Bushing (47624-90A)
43237	1991-99 Pivot bolt (47817-90)
43238	2000-05 Pivot bolt (47817-00)
43244	2006-on Pivot bolt (47641-06)
44062	1991-on Plug, chrome (67859-90)

Touring Swing Arm

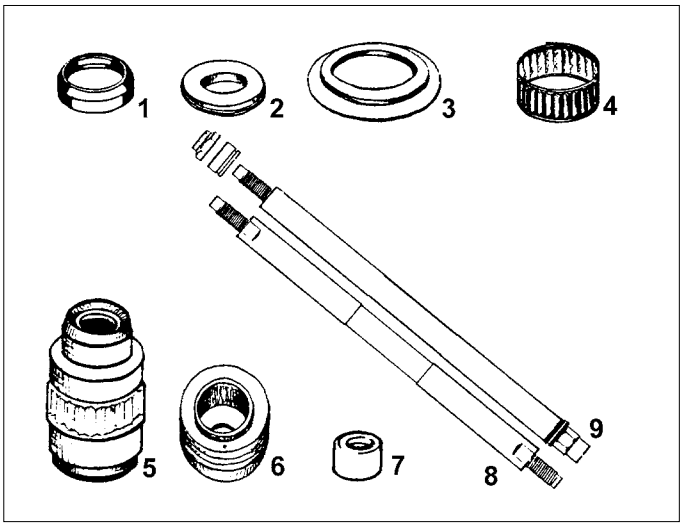





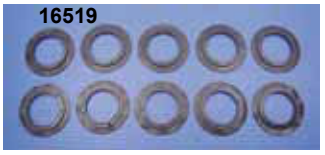









FLT/FXR Swingarm Rebuild Parts

#	PCP	Description
1	**11101**	Plastic retaining ring FLT 80-01 (47510-80) (pr)
2	**16518**	Spacer FLT 87-01, FXR 87-94 (47511-80) (pair)
3	**16519**	Nylon washer FLT 87-01, FXR 87-94 (47513-80) (10 pack)
4	**11300**	Bushing tolerance ring 79-02 (47538-79) (pr)
5	**59970**	Bushing assembly FLT 80-01, FXR 82-94 (47556-81)
6	**23097**	Mounting bushing FLT 87-08, FXR 87-94 (47564-86B)
	23101	Mounting bushing FLT 09-on (47584-09) (set)
	59969	Rubber mount FLT 82-86 (47564-82)
7	**16520**	Cupwasher FLT 89-01, FXR 89-94 (47491-89A) (5 pack)
8	**43204**	Shaft FLT, FXR 1982-88 (47515-82A)
9	**43205**	Shaft FLT 89-01, FXR 89-94 (47492-89A)
	43209	Shaft FLT 02-10 (47505-02)



Swing Arm Pivot Bolts

PCP	Year	Model	Description
43204	1982-88	FLT-FXR	Zinc (47515-82A)
43205	1989-01	FLT	Zinc (47492-89A)
	1989-94	FXR	
43209	2002-10	Touring	Black (47505-02)



Chrome Pivot Mount End Caps

PCP	Application
39160	1982-06 Touring
39161	2007-08 Touring

Swing Arm Kit

- Includes two offset steel bushings and two alloy washers
- Fits 1980-08 FL, FLT, FLHTC

16383





Swingarm Conversion Retrofit Kits 1982-02

For Touring models 1982-02 & FXR 1984-94 and replaces stock cleve block style swingarm bushings with spherical bearings that reduce friction at the swingarm pivot and lateral movement or torsion in the swingarm. Improves handling of Dresser models.

PCP	Item
43280	Retrofit kit with pivot bolt



Swingarm Iso Mount Pin Kit

Includes pin and outer support bushings with steel side plates for upgrades. Fits 1993-02 Touring.

43285



Iso-Mount Swingarm Pin Kit

Includes 1-¼" long offset ISO sleeves, pin and side bushings for FLT 1993-10.

43197 Kit







FLT/FXR Swingarm Mounting Kits

Kit includes 2 bushing assemblies, 2 spacers, 2 plastic retainer rings, 2 rubber isolators and pivot shaft with locknut. Includes all parts required to mount transmission and swingarm to pivot block. Will work with stock or aftermarket rubber mount swing arm frames for FLT- FXR models.

PCP	Year
43206	82-01 FLT, 82-94 FXR
43219	02-08 FLT
43281	09-10 FLT



Swing Arm Rebuild Bushing Set 1982-02

Includes machined nylon bushings to replace original bushing assembly. Order pin separately.

43218



Rear Fork Bearing 02-on Touring

15631 9208 (pair)



Inner S/A Spacer

For 2003-on Touring models.

11861 (48489-02) (pair)

Sportster Swing Arm







XL Swing Arm Rebuild

Kits include black pin, screw, spacer, bushing, bearing, and dust covers.

PCP	Item
43242	Pivot bolt kit 1982-03
43282	Pivot bolt kit 2004-on
15766	Swingarm bearing kit 2004-on with chrome screws
15767	Swingarm pivot shaft and bearing kit 2004-on
73568	Pivot shaft, zinc 2004-on (41568-04) (each)
21001	Bolt and nut kit 1982-03 (41658-81B)
73578	Pivot bolt 2004-on (41698-04)(each)
21002	Dust cover 1982-on (41579-81) (each)
21003	Bushing L/S 1982-03 (47083-81) (each)
15561	Swingarm bearing kit 1981-99 (47082-81)
15759	Pivot bolt right bearing 1998-03 (48367-98)
15760	Pivot bolt bearing set XLH 2004-on (9209)







Chrome Pyramid Axle Adjuster

PCP	Application
5586	Ends only XL 1979-96, FL-FX (not FXST) 1973-85 (41532-89T) (pr)
27372	XL 1997-03 (41534-97)



Colony Swing Arm End Cover and Nut Kit

For use on 1993-on Sportster. (2259-8)

72259

440 Series I.A.S. Shocks (Inertia Active System)

I.A.S. allows the shock to respond better to sudden movements of the rear wheel without transmitting the jolts to the rider. The inertia sensitive dampening system optimizes handling and comfort. The inertia valve determines whether the wheel circuit or the chassis circuit is utilized. All circuits are velocity sensitive. Shocks feature polished and anodized billet aluminum end covers, easy adjustable spring pre-load and high pressure gas charged for fade free operation.

440 Series - Standard Series

Model	Stock	11.0	12	12.5	13	13.5
5 Speed all FLT 1980-04	13”	-				
FXR-FXRS 1982-86	12.5”			**83607**		**83609**
FXLR 1987-94	13”			**83607**		**83609**
FXR/FXRS 1987-94	13”			**83607**		**83609**
FXR-SP/CONV 1987-94	13.5”			**83607**		**83609**
FXRT 1983-92	13”			**83607**		**83609**

Dyna Glide 1991-04	Stock	11.0	12	12.5	13
FXD/B/C 1991-92	12”	**83610**		**83613**	**83614**
FXDL 1993-00	12.5”	**83610**		**83613**	**83614**
FXD 1995-00	12.5”	**83610**		**83613**	**83614**
FXDS-CON	13”	**83610**		**83613**	**83614**
FXDWG 1993-99	12.5”	**83610**		**83613**	**83614**
FXDX 1999	13”	**83610**		**83613**	**83614**



440 Series - Heavy Duty Series

Model	Stock	13
Dyna Glide 1991-04	**Stock**	**11.0**
FXD/B/C 1991-92	12”	**83629**
FXDL 1993-00	12.5”	**83629**
FXD 1995-00	12.5”	**83629**
FXDS-CON	13”	**83629**
FXDWG 1993-99	12.5”	**83629**
FXDX 1999	13”	**83629**



Digital Shock Pump Tool with Gauge

Features digital display and 0-60 PSI gauge.
26153



26145

Touring Suspension Air Pump

Small, low volume pump with bleeder valve and 60psi pressure gauge makes easy work of adjusting pressure in air shocks. Features tight connector and flexible hose for getting at tricky spots.
26145 54630-03A

Shocks



FXST Dura Adjustable Shock Assemblies
Feature full chrome finish with up to 1” lowering capability.
83506 1984-88
83504 2000-on





FXST Adjustable Chrome Shock Sets
Bolt kit sold separately.

PCP	Application
83526	1989-99 Shock set (54508-89A)
83527	2000-10 Shock set (adjusts 1” to 1-½”)
73629	1989-99 Bolt set
24058	2000-06 Bolt set

FLST-FXST Shock Stud Kit
Includes 4 bolts and 4 washers.

PCP	Application	Finish
24048	1989-99	Zinc
24051	1989-99	Chrome
24058	2000-06	Chrome





Black Standard Softail Shocks
- 11” c/c of shock eyes
- Fits FXST 1989-99 and replaces 54508-89A

83532



FLST-FXST Lowering Kits
Fully adjustable shock link for Softails. It’s left hand threaded design allows adjustments in small increments from stock to the drop of your choice. Adjustment is accomplished with an open end wrench with no disassembly of shock required. #40503 lowers bike height while on bike.

PCP	Year
40503	1989-99
40505	2000-06



White Bros. Shock Lowering Kit
One piece design to fit Softails 1989-99. Shocks need to be loose for adjustment.
40504 Set





Chrome FXD-FXDWG Shock Set

Will lower bike 1". Center to center distance noted. #83507 Does not lower 2001-05 FXDL.

PCP	Length	Year
83505	11.0"	91-09 FXD/WG
83507	11.5"	93-05 FXD/WG (54594-03)
83529	12"	07-on FXD/C/WG, 08-on FXDF (54537-08A)



Dura AEE Series Shock Sets for FLH-FLHT

AEE series shock sets for 1980-2004 FLH-FLHT are nitrogen charged with multi stage dampening and adjustable spring load. All shocks are measured eyelet to eyelet and feature chrome springs and caps with black body. Stock length = 13" for FLH, 1983-94 FXRT, 1987-94 FXRS-FXLR and 1991-08 FXD. Stock length is 12.5" for 1984-94 FXRD.

11.5"	13"	13.5"	14.25"
83521	**83523**	**83524**	**83525**



Adjustable Softail Chrome Shock Mounts

Fits 2000-on models. Installs on the stock shock and offers easy adjustment from stock ride height to two inches lower.

59569 2000-17



Chrome Low Touring Shocks

Shocks will lower the seat height up to 3/4". The air adjustability feature of the stock shocks is retained for a comfortable ride.

PCP	Model
83518	2002-on LT, FLHT, FLHS, FLTR, FLHR (54631-02B)
83519	1991-01 FLT, FLHT, FLHS, FLTR and FLHR (54631-98)
23025	Rubber boot set 97-12



2000-on Rear Softail Shock Parts

PCP	Description
20514	Washer, hardened right side (6534)
20515	Washer, hardened left side (6535)
15753	Bearing, rear fork pivot (9270A) (each)
11114	Retaining ring, fork bearing (11282)
29161	Bumper, rear fork (not Deuce) (11514)
20109	Shock locknut, flange (45764-00) (pair)
43208	Pivot shaft 2000-07 (47610-00)
21010	Bushing, rear fork (48048-00)
21011	Spacer, rear fork (48049-00)
21012	Shock bushing 2000-06 (56182-00) (pair)
20516	Shock washer with grommet (56183-00) (each)



Chrome Billet Shocks FXST-FLST 1989-99

Smaller, 2" O.D. diameter allows more room for custom installation. (11" C/C)

83508

Shocks





1” Lower Rear Shocks

These shocks with chrome plated springs and body caps can be used to lower the seat height by 1”. Shocks feature a suspension preload that is adjustable for rider and passenger load. Does not lower XL Hugger or Custom models.

59712 1991-05 Sportster 883/DLX, 1200 (Not XL 1200L) and 1992-5 883R (54733-04)



412 Series Dyna Shocks

PCP	P.S.	Application
83576	412-4036C	12” Stock length Dyna 1991-04



XL Shocks 1991-03

XL shocks feature chrome springs and are 11.75” from eye to eye to provide a 1” lower seat height.

59029 54568-92



Shock Sets for Sportster

Includes chrome springs.

PCP	OEM	Length	Fits
83516	54568-82	12.5”	1982-87 XL-XLS-XLX 1988-90 XLH 883 Hugger
83513	54568-04	13.38”	2004-08 XL 1200



Sportster 2” Lower Shocks

11.75” Shocks fit XL 883 STD, Deluxe and XL 1200. Sold in pairs.

65302 1988-90 (54576-90)

65304 1991-03 (54568-92)




Colony Custom XL Shock Mounting Bolt Kit

Chrome dome bolts for use 2000-on Sportster.

72405 2004-on

72406 2000-03

Warning!
Installing a lowering kit or shorter shocks will decrease initial ground clearance. The motorcycle will be lower to the ground and care should be taken to avoid bottoming out, especially over bumps or turns.

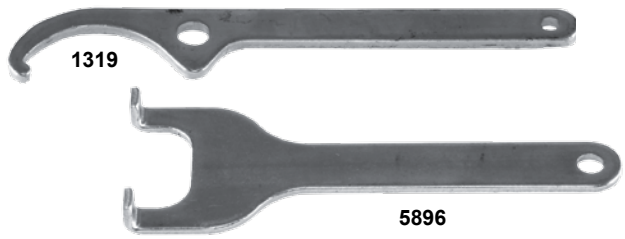

Shock Spanner Wrenches

PCP	Model
1319	1979-on Sportster, (94409-78) 1979-on FLT, 1982-94 FXR (94448-82)
5896	1989-on FXST-FLST (94455-89)



FXST Shock Lowering Kit

40500 FXST 1984-88

Shock Tool FXST 1989-on

For use with 3/8" ratchet drive.
73648





Dual Shock Tool

Fits 1989-on FXST, 1979-on FLT, XL and 1991-on FXD.
26156







Shock Stud Covers for FXD & Sportster

PCP	Description
45058	XL 1982-90, FXR 1982-94 (54705-81)
45057	XL 1991-99 (not 1996-on XL 1200S) (54712-94)
45061	FXD 1991-99 (54341-96)
45572	XL 1991-03, XL 1200C 2008 (54616-96)
45573	XL 2004-on (54724-04)



Kickstand Bumper Pad

Kickstand bumper pad complete with adhesive backing to protect primary cover from the return of the jiffy stand. Fits all Big Twin 4-speeds 1970-92. (OEM 50100-70).
23028 Sold in 5 packs



Upper Shock Stud Kits (Zinc)

Sold as pictured. Fits FL, FX 4-speed models 1973-86.
4623 54515-73



Lower Shock Stud Kits (Zinc)

Sold as pictured.

PCP	Description
4627*	FL, FX 4-speed models 1973-84 (3958)
4629*	XLX, XLS 1982-91 (4081)
4630*	FXR 1982-94 (1614)
9986	FXDG 1991-99 (Allen)

*Note each kit has 2 chrome nugget nuts

Shock Lowering Kits













Rear Shock Lowering Kits (Black)

These kits lower the rear shock area, shown as installed on a 1984-on FLT-FLHT. Includes instructions, hardware and brackets (black). Designed for adequate saddlebag and lower shock boot clearance on FLT's.

27037 1985-96 FLT-FLHT, lowers 1-1/2"
27046 1997-2001 FLT (except FLHRCI) lowers 1-1/2"
27069 2002-03 FLT, lowers 1-1/2"
27386 2004-10 FLT, lowers 1"
27387 2004-10 FLT, lowers 1.5"
27028 1991-99 FXD, lowers 1"
27060 2000-05 FXDG, lowers 1"
27373 2006-on FXD, lowers 1"
27039 1986-99 XL, lowers 1"
27047 L1989-99 XL Chrome
27049 2000-03 XL, lowers 1" black
27091 2000-03 XL lowers 1" chrome
27369 2005-on XL, lowers 1" black
27370 2005-on XL, lowers 1" chrome



27069 shown installed



Shocks

27373












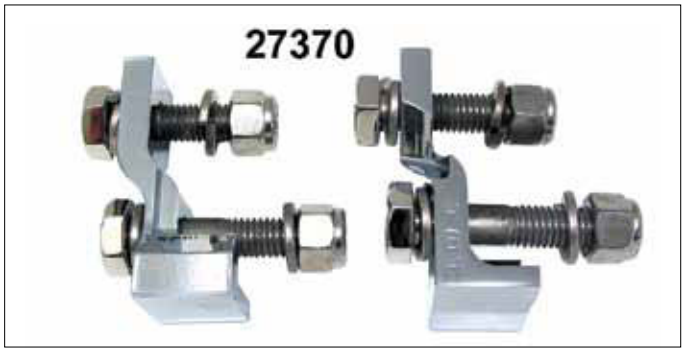

27047



Warning!
Installing a lowering kit or shorter shocks will decrease initial ground clearance. The motorcycle will be lower to the ground and care should be taken to avoid bottoming out, especially over bumps or turns.



Highway Bars

For Highway Bars Listed on this page.

WARNINGS: These Highway Bars are for cosmetic use only and will not provide leg or vehicle protection in the event of a low-speed fall. They are not made or intended to provide protection from bodily injury in a collision with an automobile or any other object.





FLT-FLHR Touring Chrome Guards

PCP	Year	Models
84109	1984-87	FLT, HT, HS with air (49184-84A)
84111	1988-96	All Touring (49184-88A), 1-¼"
84121	1997-08	All Touring (49184-97)
84148	2009-on	All Touring (49184-09) (T/L)
84154	2009-on	All Touring (49184-09) (Preston)





FXST Chrome Front Engine Guard

PCP	Application
84140*	2000-17 FXST/B/C/D/S and FXCW/C, not for extended reach kits OEM #49171-04 and 40223-04 (49200-07A)
84141	2000-on FX Softail models equipped w/OEM control kits # 49171-04/08 and 40223-04/08 (49078-04)
84119*	1972-85 FX-FXE, 1980-86 FXWG 1 1/4" 1984-99 FXST/C/S/SB (not FXR) (49016-72D)

*Not for extended reach controls



Black Engine Bar with Footrests

Features integrated rubber pads for footrests.

Black	Application
84162	1986-99 FLST
84163	2006-on FXD, FXDWG with mid or forward controls




Chrome FLT Front Engine Bar

Tradition Touring style 1-½" diamter engine bar. Fits 1997-08 FLT models.

84158



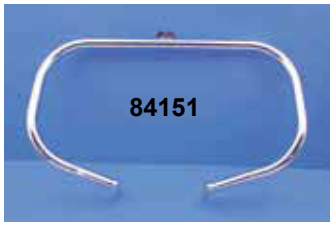

FL Softail Chrome Guards

PCP	Year	Models
84104	1986-99	FLST/F/S, FLSTN (49004-90)
84151	2000-on	FLSTC, FLSTF, FLSTS (49004-00)





FXD-FXR Guards

Chrome	Black	Application	OEM
84138		06-on FXD, FXDWG w/mid or forward controls & FLST/C/F/N/S	49010-06
84133	**84163**	06-on FXD, FXDW w/footpeg pad	
84116		93-05 FXDWG, FXDX w/mid or forward controls	49010-93
84102		82-94 FXR 82-94	49017-82A



Chrome Dual Fog Lamp Kit

Features flat oval diecast lamps with 55 watt halogen bulbs. Chrome alloy clamps fasten to 1-1/4" engine guards. Not for FLTR 1998-on, Softail 2000-on with nostalgic mustache guard.

66122 Set

Highway Bars



Lindby Custom Highway Bars with Footpegs

Features 1-1/8” tubing for front highway bars and 1” tubing for rear. Both front and rear have built-in o-ring footpegs. All rear highway bars will work with stock exhaust systems.

Front Highway Bars

PCP	Application
84124	FLT, FLHT, Road King 1997-on
84132	FXST, FXSTS, FXSTD, FLSTS 2000-on
84122	FLSTC, FLSTF 2000-on



Lindby Rear Highway Bars

PCP	Application
84009	FXST, FLST 1996-on



Chrome Engine Guard with Footpeg Mounts

Constructed of heavy guage 1” tubing. Blind studs inserted into the tube provide multiple (4) position footpeg mounts and eliminates the need for clamps. Fits FLST, FLSTC, FLSTF 1986-99. Kit includes engine guard, triangle footpeg brackets and mounting hardware, order footpegs separately.

84112

WARNINGS: These Highway Bars are for cosmetic use only and will not provide leg or vehicle protection in the event of a low-speed fall. They are not made or intended to provide protection from bodily injury in a collision with an automobile or any other object.







Chrome Mustache Front Engine Guard

Features integrated rubber pads for foot rests.

Chrome	Black	Application
84144	**84162**	86-99 FLST
84145		00-on FLST
84146		97-08 FLT (not FLTR or with fairing lowers)
84147		09-on FLT (not FLTR or with fairing lowers)
84133		06-on FXD and FXDWG with footpeg pads







Sportster 1-¼” Diameter Engine Guard

PCP	Year	
84130	1986-03	49018-88C
84156	1886-03	With pads
84149	2004-on	49060-04
84150	2004-on	Mustach style with pads

Highway Bars

For Highway Bars Listed on this page

WARNINGS: These Highway Bars are for cosmetic use only and will not provide leg or vehicle protection in the event of a low-speed fall. They are not made or intended to provide protection from bodily injury in a collision with an automobile or any other object.





Chrome Rear Frame Bars (no reflectors)

Chrome 7/8”tubing for right and left sides.

PCP	Model
84012	1997-on FLHT/R, FLHR, FLHRI/CI (49187-97, 49176-97) (w/bags)
84017	1997-08 FLHT, FLHR, FLHRC, FLHX (no saddlebag rails) (49201-97)
84013	1997-08 FLHTC, also fuel injected (49202-97, 49203-97) (w/bags)
84014*	1997-08 FLHR/I, FLHT, FLTR/I, FLHX (no rail) (49087-01)
84000	FLT 1997-13 1 1/4” tubing (does not allow the use of clamp-on saddlebag guards
84016	2000-05 FXST, 2000-05 FLST/C (not FXSTD, FLSTF, FLSTS) (2000-05 FLSTC models require saddlebag relocation kit OEM# 90238-00) (49261-00)

Note: Tool box kits will not fit with these bars.
85015 will not work when saddlebags are installed on guards
*FLHX and FLHRS will require separate purchase of 82138 saddlebag supports.

NEW ITEM
COMING SOON

Comfort Style Chrome Rear Engine Bar

- Top of guard angles downward providing more rider leg room
- Kit includes left and right guards and hardware
- Fits 2009-13 FLHRC, FLHTR/SES/XSE, FLHX/SE,

82145

NEW ITEM
COMING SOON

Rear Engine Bar Set

Set includes left and right guards, saddlebag supports and hardware to replace the support under the saddlebag. These bars protect the leading edge of the bags.

Black	Chrome	Application	OEM
82144	**82143**	2009-13 FLT	49282-09B





Billet Engine Bar Foot Peg Mount
Fits on 1-1/4" engine bars (except VRSC and XL 2004 and Softail nostalgic guard) to accept male pegs on front engine bars.

PCP	OEM	Finish
59204	50957-02	Chrome
73559	50957-02	Black



Footpeg Mount Kit
Allows male type pegs to be mounted to a 1-1/4" diameter engine bar.
39129





Foot Peg to Bar Clamp Kit
Fit 1-¼" engine bars to mount male peg sets.
27394



Chrome Footpeg Mount Kit
Chrome footpeg mounts with 1-¼" clamps for installation on highway bars. Works with male mount pegs and fits 1980-on FLT models.
39059 (50829-07A)



Cats Paw Footpeg Kit
Large Cats Paw footpeg set with adjustable brackets and 1-¼" clam shell clamps for frame mounting.
39009



Chrome Fog Lamp Engine Bar Clamp
Chrome clamp for 1-¼" engine bar. Fits FLT 86-on.
27426



Chrome Billet Engine Bar Footpeg Mount Kit
Fits on 1¼" front engine bars with male pegs.

PCP	Item
59222	Kit
59204	Chrome, mounts only
73559	Black, mounts only

Softail Side Stand



FXST Chrome Stock Length Kickstand
Features a ball tipped built-in extension arm that makes the stand easier to use.
43267 1989-06 Softail
27393 2007-on FXST





Original Style Kickstands
Fits 74” & 80” 4-speed models 1936-88 (OEM 50061-36).
201 Stock length
43220 For 2”-4” over forks (17-1/8”)
202 For 4”-6” over forks (15-5/8”)



FLST Chrome Jiffy Stand Assembly
Stock length kickstand fits FLST 1986-99.
43230



FXST Chrome Jiffy Stands
27198 1986-06 FXST stock (Preston)
43268 1986-06 FXST, 1” lower
43264 1986-06 FXST, 2” lower
27393 2007-on FXST, stock



Adjustable Kickstand Locktab Kit
Includes adjustable kickstand lock tab, flat washer, acorn nut and spring. Fits 1986-06 FLST, FXST.
27044



FXST Jiffy Stand 1989-99
PCP	Description
60015	Chrome leg bracket (50018-85)
27308	Chrome spring bracket 1991-99 (50028-91)
13229	Black spring 1985-06 (50005-85A)
13255	Chrome spring 1986-06 (50005-85A)
206	Chrome leg stop 1984-06 (50015-74)
23042	Rubber bumper 1993-on (62123-66) (pair)

Softail Side Stand





Jiffy Stand Kit Assembly
Chrome as shown with all parts necessary for installation.

PCP	Application
1225	BT FL, FX, FXWG 1984-85
43221	As above, extended 2-4”
43222	FXST 1984-99 stock
43265	FXST 1984-99 1” under
43284	FXST 1984-99 2” under
9617	Chrome mount kit 1936-99



Chrome Custom Kickstand Kit
Fits 2 bolt mounting. Kit includes stand, spring, mount and tapered bolts. Bolts to forward controls or to frame behind primary.

PCP	Application
43232	1986-99 FXST-FLST lowered bikes
43259	1986-99 FXST (hidden)



FXST Chrome Extended Jiffy Stand 1984-88
43220 Extended 2” to 4”



Chrome FXST Kickstand Tab Kit
Kit includes washer, spring, acorn nut and tab. Fits 1984-99.
59137



Kickstand Bumper Pads

PCP	Application
23028	1970-86 BT, FXST 1984-88 primary (50100-70) (5)
23030	1985-00 FLT for 1” frame bumper (50059-85A) (ea)
23051	2000-06 FLT, FLHT/R/TR toe end (50245-99A) (each)
23029	1990-07 XL frame bumper (62122-89) (5 pack)
23042	1993-on Softail toe end (62123-66)(pair)
23035	1991-00 FXD for 1-1/8” frame (50054-90) (each)
23088	1991-on FXD/L/WG frame bumper (50054-01)
23108	2008-on XL Bumper stop (each)



Kickstand Bushing Set
- Zinc plated steel bushing set for use with kickstand pin
- Fits 2007-on FXST and replaces 53176-08

16392

Softail Side Stand



Forged Kickstand FLST, FXST 2007-on
Heat treated steel kickstand with flattened base.
27233 Stock size, black (50000091)
27234 1” Lower, chrome



1980-99 FXWG-FXST Kickstand Assembly
Features chrome steel construction with hidden spring mechanism.
43260



Chrome Contour Kickstand Legs
Includes lock tab.

PCP	Item
43262	1989-99 FXST models



FXST Chrome Custom Kickstand 1986-99
43259



Custom Jiffy Stand Assembly
Features full forged construction with chrome smooth contour design, including recessed mount screws for 1936-86 BT, 4 speed and 1984-99 FXST models. Stock length.
59206



Chrome Kickstand Kits
Includes jiffy stand, spring, pin, bushings and clip.

PCP	Application
43398	FXST 07-on
43297	FXD 90-05, FXDWG 91-05

Softail Side Stand





Chrome Smooth Jiffystand Bracket
One piece forged design with recessed mount hardware. FXST 1984-99
59205



Adjustable Kickstand Assembly
- Adjustable leg with hidden spring
- Mounts to the left side frame boss
- Fits FXST 1984-99

43388



Brake Shifter and Kickstand Mounting Screws
Allen screw kit fits 2000-on FXST and FLST.
72049





BT Complete Chrome Kickstand Mounting Kit
4 Piece kit includes kickstand mount spring, leg stop and spring plate.

PCP	Application
27353	1985-99 FXST
27358	1986-99 FLST



"Full" Lowering Kits
Includes components to lower the front and rear of FXST models. Each kit includes shorter damper rods, 1" shorter kickstand and adjustable rear shock lowering set. The front of the FXST is lowered 2.5" and 2" on FLST models. Rear is adjustable up to 1.5" on 2000-on models using stock shocks.

PCP	Application
82093	2000-06

Note: When installing these kits, you **must** check ground clearance and tire to fender clearance.



Chrome Kickstand Extension Kit
- Allows for easier access of the stand when it is folded up
- Installation requires drilling a hole in the kickstand tab
- Fits 2007-on and replaces 50000008

27272

FLT Side Stand



FLT Chrome Jiffy Stand

27244 FLT 1984-90 (50075-83A)
27245 FLT 1991-06 (50075-91)
27391 FLT 2007-on (50076-07)





Chrome Kickstand Kit for FLT 09-on

Includes jiffy stand with extension kit, leg stop, bracket and hardware.
43293





Angle Plate

Fits FL, FLT kickstands 1984-06 with longer forks.

PCP	Item	Finish
73714	Plate	Alloy
73715	Kit	Chrome



Kickstand Wedge Kit for Touring 84-08

Allows the use of stock kickstand, without excessive leaning, when the bike is lowered.
27048



FLT Jiffy Stand 1991-on

PCP	Description
27307	Chr. mount bracket 1981-08 (50078-81)
206	Chrome leg stop 1991-99 (50015-74A)
23030	Rubber bumper 1985-00 (50059-85A)
13229	Black spring 1985-98 (50005-85A)
13255	Chrome spring 1985-98 (50005-85A)
13241	Chrome spring 1999-06 (50112-99)
13242	Black spring 1999-06 (50112-99)
13243	Black spring 2007-on (49725-07)
13257	Chrome spring 2007-on (49725-07)



FLT Chrome Jiffy Stand Kit

Kits include jiffy stand leg, spring, bracket and bumper stop with mount hardware.
43235 2001-06
43236 1985-00




FLT Chrome Kickstand Extension

- Allows rider easier access to the side stand
- Installation requires drilling a 17/64” hole in side stand tab
- Fits 1991-on FLT and replaces 50000023

27218

Dyna-FXR Side Stand



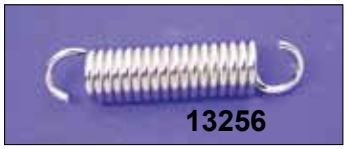

Chrome Jiffy Stand Dyna 1991-on

Fits FXD, FXDWG and FXDL 1990-on.

43234 Stand, stock 1991-05 (49704-90C)
59933 Stand, 1" under 1991-05
43263 Stand, stock 2006-16 FXD/WG
13256 Spring 1991-01 (50057-91)
13261 Spring 2002-on (50057-02) FXD/WG
60013 Pivot block 1991-on












FXR Jiffy Stand Unit

Chrome plated stock replacement kickstand. Chrome kickstand with mounting pin (50069-82).

PCP	Application
699	1982-90 FXR/S/LR kickstand (50069-82)
10170	1982-90 All FXR kickstand pin (50009-82)
13230	1982-90 All FXR k/stand spring, chrome (50011-30)
27390	1991-94 FXR/S/LR (50031-91)
10169	1991-94 all FXR kickstand pin (50009-91)
13255	1991-94 All FXR k/stand spring, chr. (50005-85A)

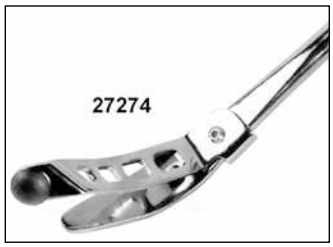



Kickstand Extensions

Will allow rider to more readily access side stand.

27273 FXD 1991-on (not FXDS-CON, FXDWGZ and 2001 FXDL (50214-98)
27274 XL 1984-03, 1992-03 XL STD,DLX,1200/S & 883 (not Huggers or 1200C or 1992-99 Custom) (50212-98)
27399 XL 2004-on, XL883C, 1200C/L (50250-04)
27280 Softail 1986-06, FLT/HT/HR/HS/RC 1984-90 (50233-00)





Chrome Kickstand Hardware Kit FXD, FXDWG

Includes kickstand spring, catch, block and hardware. Order appropriate kickstand separately.

16384 1991-97
16385 1998-on









Dyna Jiffy Stand 1991-on

PCP	Description)
60001	Stand anchor all Dyna 1991-97 (47303-91)
60017	As above, all Dyna 1998-99 (47318-98)
60013	Pivot block Dyna 1991-on (49720-90)
13235	Spring, zinc Dyna 1991-01 (50057-91)
13238	Spring, chrome Dyna 1991-01 (50057-91)
13240	Spring, chrome FXD, FXDWG 2002-15 (50057-02)
23042	Rubber bumper FXDS 1995-99 (pair) (62123-66)



Crane Sure Foot Stand

Keeps kickstand from sinking into soft terrain and possibly falling over. Just throw the sure foot on the ground and position your bike so the kickstand fits into the alignment grooves.

34599




Black Slotted Kickstand Extension

Allows rider to more easily access the kickstand on 1993-on FXD models.

27177

Sportster Side Stand

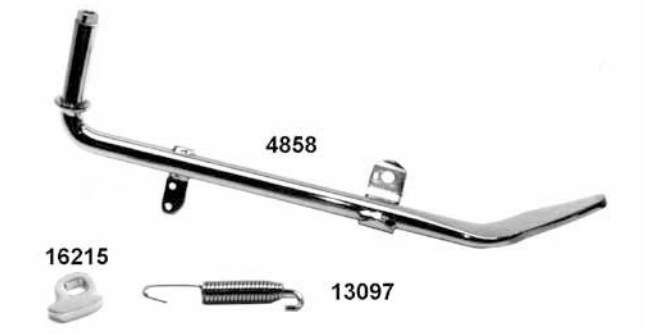

1984-88 XL Chrome Kickstands

PCP	Year	Item
4858	1984-88	Stock stand
16215	1984-88	Catch
13097	1984-88	Spring



1989-03 XL Chrome Kickstands

PCP	Year	Item
43216	1989-03	Stock stand (50006-89)
43223	1989-03	Short stand for Hugger models with lower shocks (50072-92)
10181	1989-up	Pin (50003-89B)
13255	1986-11	Spring (50005-85)
13229	1986-11	As above, black (USA)
18715	1989-03	Bushing set




XL Jiffy Stand Extension

Chrome plated extension makes your jiffy stand easier to find when parking your bike.

PCP	Application
27274	1984-03 XL except 883 Hugger and 1992-99 XL Custom models (50212-98)



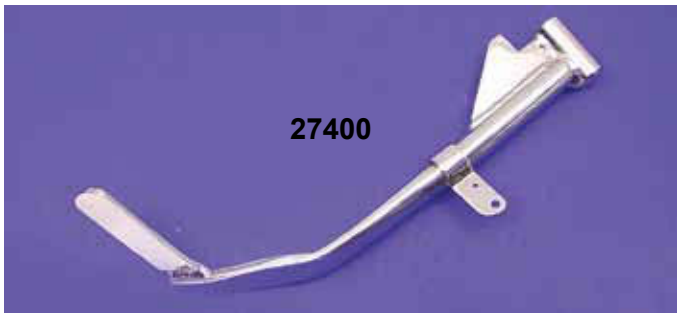

Chrome 2004-on XL Kickstands

21724	2004-08	Stock stand (50185-04)
27400	2004-08	1” Lower (50238-07)
43217	2009-up	Stock XR1200 (50214-09BHP)
43295	2011-on	Stock 883L/N, 1200C/CP/N/X
10181	1989-up	Pin (50003-89B)
13255	1986-11	Spring (50005-85A)



Chrome Jiffy Stand

Stock length kickstand fits XR 1200 2009-on and XL 2008-on.

43217 50124-09BHP



Gloss Black Kickstand

- Gloss Black finish
- Fits XL 2004-08

27235

Custom Side Stand



Weld-On Kick Stand Assemblies
Features weld-on type heavy duty mount, chrome spring and chrome kickstand with forged flat end.
43394



Custom Weld-On Kick Stand Assemblies
Features chrome stand with hidden spring. Units fit frame tube size as noted.

PCP	Size
43390	1-1/8”
43391	1-1/4”
43392	1-1/2”



Frame Mount Kickstand Stop
For use on all open belt Big Twin by clamping to frame tube. Cut to desired length.

PCP	Size
27352	1” I.D



Kickstand Extension Kit
Features easier access to Jiffy stand, but tucks in close to primary case when folded up. Hardware included for mounting. Requires drilling a ¼” hole through the kickstand. Replaces 50055-90.
27162 FLT/HT/HS/HR/C 1984-90, Softails 1986-06

Kickstand Hardware










Big Twin Chrome Kickstand Hardware

PCP	Description
4398	Mount bracket w/ spring tab 1936- (50041-80)
204	Mount bracket 1936-86 (50049-36, 50014-58)
27160	Mount bracket, FLST 1986-99 (50018-85)
27161	Mount bracket, FXST 1986-99 (50041-85)
205	Spring plate BT 1936-86, Softail 1984-90 (50036-36, 50028-74)
27308	Chrome spring plate 1991-99 FXST (50028-91C)
206	Leg stop 1936-86 BT and Softail 1984-06, FLT 1980-03 (50094-36, 50015-74)
27307	Mount bracket FLT 1981-08 (50078-81)
27340	Mount bracket FLT 2009-on

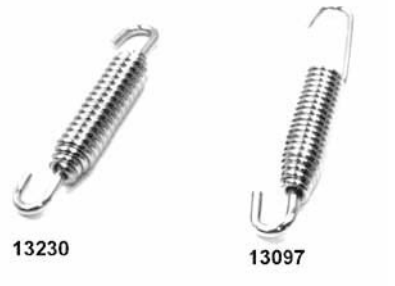

Kickstand Springs

PCP	Description
13230	Chrome BT 36-85, FXR 82-90, XL 57-83 (50011-30)
13233	As above black
13097	Chrome 1984-88 Sportster (41836-84)
13255	Chrome Softail 1986-06, Sportster 1989-11 FXR 1991-94, FLT 1985-98 (50005-85A)
13229	As above, black 50005-85A)
13241	Chrome FLT 1999-06 (50112-99)
13242	Black FLT 1999-06 (50112-99)
13257	Chrome FLT, Softail, XL 2007-on (49725-07)
13243	Black FLT, Softail, XL 2007-on (49725-07)
13256	Chrome Dyna 1991-01 (50057-91)
13235	Zinc Dyna 1991-01 (50057-91)



Big Twin Complete 4 Piece Kickstand Mounting Kit

Works on all Big Twins 1936-on. Includes kickstand mount spring leg stop and spring plate. Chrome plated.
4399



Acorn Kickstand Mounting Kit

Fits Big Twin 4 speed 1936-86 except softail models.
1803



BT Adjustable Kickstand Stop

The chrome steel kickstand stop eliminates the need for glue on rubber bumper pad while protecting the primary case. A nylon tipped set screw allows easy adjustment for proper kickstand position. Fits FL/FX 4 speed 1958-84 (not FXWG) & FXST 1989-06
27141



Kickstand Lowering Wedge


Fits under BT mount bracket to change angle of bracket and assembly when using shock and fork lowering kits.
27043



Chrome Jiffy Stand Bracket Cover

Chrome cover hides the stock black bracket on 1996-07 Touring models. Cover works with fairing lowers. No hardware is supplied with this cover.
29676 50251-01



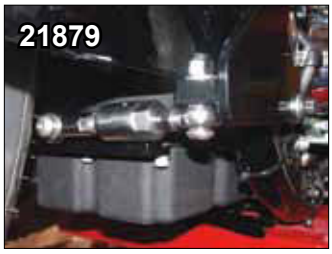





The Tour Torque Linkage System

Fits all Touring models and no modifications are necessary to install. Eliminates lateral movement while still allowing the ISO mounted factory design of the “floating” drive chain to move vertically through connecting the rear of the transmission case to the frame. The kit uses an isolation kit with an urethane plunger so there is no contact between the frame and the engine trans assembly, therefore reducing vibration. Chrome kit features chromed outer mount bracket as well.

PCP	Finish
21879	Black 1993-08
21880	Chrome 1993-08
21922	Black 2009-on
73751	Foot peg spacer set required for installation on 1993-01 models. Must be purchased separately, not included in kits



BT Chrome Motor Mount

Replaces the stock mount in all Big Twin with rubber mounted engines. It uses urethane formulated compounds with enhanced compression and rebound dampening properties for a 20% reduction in transmitted vibration. Fits FLT 1979-08 and FXR 1982-94.

40060



FLT-FXR Motor Mount Components

PCP	Description
40021	Front mount, black 1979-08 (16207-79B)
40060	Sifton, as above with 20% vibration reduction
40022	Front mount, chromed 1979-08 (16207-79B)
40019	Chrome stabilizer link, upper or lower FLT 1979-08, FXR 1982-94, upper on Dyna 1991-94 (16219-79B)
40020	Zinc upper stabilizer Dyna 1995-13 (16258-95A)
40063	Chrome upper stabilizer Dyna 1995-13 (16258-95B)
21000	Front bracket FLT 1979-08, FXR 1984-94 and 1999 (47159-79A)



Velva-Ride Motor Mounts

Replaces stock mount an all Big Twin engines. This mount provides a 20% reduction in vibration due to its urethane formulated compounds that offer enhanced compression and rebound dampering properties.

30056 Fits FLT 79-08, FXR 82-94, FXD 91-on rubber mount engines

ISO Mount Kit FLT 1979-08 and FXR 82-94

Use this kit to dampen extreme movement on front motor mount cushion.

40116





Chrome Velva-Ride Engine Stabilizer

Features a steel body with a urethane dampening plunger which together acts as a mini-shock absorber. Fits FLT 79-08, FXD 91-14 and FXR 82-94

40054

Motor Mounts



FXST-FLST Chrome Mounts

PCP	Description
40101	1991-98 Top mount FXST-FLST, 1991-98 FLT/Dyna (16242-90 , 16247-91)
40103	1984-98 Top mount block, zinc plate (16284-84)
40104	1991-98 Top mount (not FLST w. VOES)









Chrome Top Engine Mount Kit

3 Piece kits include choke mount. Fits 1992-99 FXST-FLST, 2000-05 Softail and FLT models.

PCP	Year	Model
40113	1999-05	Softail
40109	2006-on	Softail with cable mount
40110	2006-on	Softail with out cable mount
40119	2008-on	FLST with out cable mount



Softail Chrome Top Motor Mount

Replaces OEM 16852-83A. Fits all 1984-90
4491



Chrome FXST-FLT Top Motor Mount Kit 00-05

Includes hardware and cross and top bracket for 2000-05 FXST and FLT models with carb.
40112



Topline Top Motor Mount 1992-99

29424 FXST (16878-99)



Chrome Billet Key Switch Mount

Bolts to top motor mounts with 2 holes.
73716

FLT Chrome Top Motor Mount 1984-98

2 Piece design to mount rubber engines in stock or custom solid mount frames.
40027 47169-83A



Chrome Front Motor Mount

Fits 2009-on FLT.
40121 (16321-08)





Chrome FXST Top Motor Mount

Topline quality motor mount to fit Softails 1992-98
40108









FXST Chrome Billet Top Motor Mount

Fits 1984-05 FXST models. Order related brackets separately. Coil mounts accept 2-single fire Crane or Dyna coils.

PCP	Item	Application
59358	Top Mount	1984-99 FXST
59059	Top Mount	2000-05 FXST, FLST
59359	Coil Mount	Without key switch hole
59368	Coil Mount	With key switch hole
59928	Coil Mount	With key switch hole





Top Motor Mount w/Integral Coil Mount

Chrome mount provides a coil mounting that is up and behind the normal top motor mount. Mounts coil between cylinders for use with coils with central terminals. Mounts coil style shown. For Twin Cam and most Evo coil applications, spacing may be required. Fits FXST 1984-98.

PCP	For Motors
59863	80-100”
59864	101” and up





Chrome Billet Top Motor Mount Softail 1984-99

59355



Chrome Front Motor Mount Bolt Mount Block

Front motor mount bolts thread into this regulator mount block.

59598 Softail 1986-99

Motor Mounts



Dynaglide Motor Mount
Fits 1990-up FXD.

PCP	OEM	Item	Type	Year
40024	47583-90B	Isolator	Front	1991-11
40038	47564-90B	Mount	Rear	1991-98
40115	16242-90	Mount	Top	1991-03
40039	47564-99	Mount	Rear	1999-on
40120	Chrome	Mount	Top	1995-on
40020	16258-95B	Stabilizer top link		1995-13
40063	Chrome	Stabilizer top link		1995-13



Chrome FLT Stabilizer Bar
Fits FLT 2009-on.
40064



FLT Front Engine Mount Stabilizer
Limiter kit dampens extreme movement on front motor mount
Fits FLT 2009-on.
40125



Chrome Choke Cable Mount
For FLT-FXST/D 1993-99.
27320 69126-92



Chrome Front Motor Mount Assembly
Fits 1979-07 FLT & 1982-94 FXR models and includes bracket, link iso mount and hardware.
59207



Black Front Engine Mount Bracket
Stock replacement front mount bracket for FLT 2009-on.
Replaces 47159-07BHP.
40122



FXR V-2 Chrome Top Motor Mount
Replaces OEM 16216-83A.
Fits all 1984-89 FXR's.
40100



Chrome ISO Engine Mount
- Billet alloy mount plate with polyurethane bushing
- Use with 5 or 6 speed rubber mounted BT models
- Fits 1979-08 FLT and 1982-94 FXR

40124



XL Chrome Motor Mount Kit 2004-13
This motor mount has a polished and chromed finish with chrome hardware included. Replaces original black mount on 2004-13 XL models.
61091 47480-04



XL Chrome Top Front Mount 1986-03
Replaces 16214-86 on 883-1100-1200 models.
27328 Mount
9967 Bolt kit XL 1986-03 and BT 1993-on



Top Motor Mount for XL's
40111 1986-94 (16278-86A)
40114 1995-2003 (16278-95B)



Chrome Motor Mounts XL 1984-03
Order top mount cover seperately to cover existing mount. Sold in pairs.

PCP	Description
3424	Front mounts (16210-84A, 16212-84) (pair)
5476	Top mount cover 1986-94 (16274-88T)



XL Rear Motor Mount 1982-90
2 bolt top style, cast, replacement

PCP	Description
4058	XLH 1982-90 (16203-82A)

Motor Mount Hardware



Top Motor Mount Spacer
For spacing out top mount or wide tire conversions.

PCP	Thick
73650	5/8"
73652	½" x ½"ID x 1"OD Zinc (each)



Acorn Front Motor Mount Kits Dyna 1991-on
9936



XL Acorn Motor Mount Kits

PCP	Application
5506	Lower 883/1100 1986-on
5507	Upper 883/1100 1986-on



Chrome Polished Allen Motor Mount Kits

PCP	Application
9927	Softail 1984-99
9928	FLT, FLHT, FXR, FXRS, 1988-06 w/rubber mounted motors
9937	Front Dyna 1991-on
9956	Motorcase mounting kit TC-88 1999-on



FXST Upper and Lower Motor Mount Kit
Complete stock motor mount kit includes heat treated, plated bolts, locknuts and heavy duty washers.

PCP	Application
9854	Softail 1984-99 chrome
9855	As above zinc



Touring Lower Motor Mount 1988-06
Complete stock motor mount kit includes heat treated, plated bolts, locknuts and heavy duty washers. Fits FLT, FLHT, FXR, FXRS with rubber mounted motors.

9859	Chrome




XL Chrome Polished Allen Motor Mount Kits

PCP	Application
9771	1986-on (centre)
9793	1986-on (upper)

XL Forward Controls



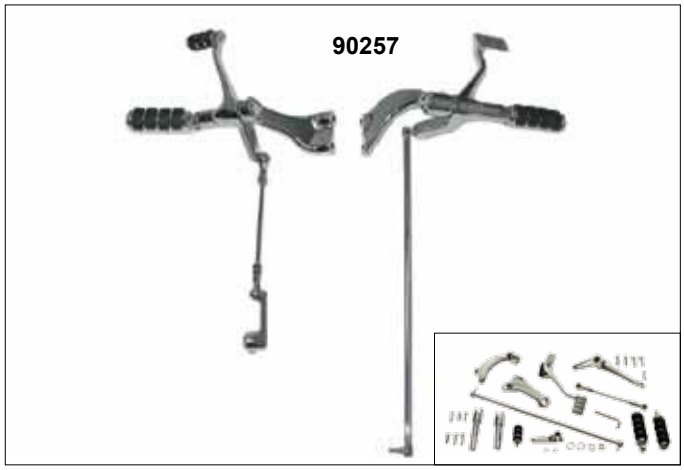





XLC Style XL Forward Control Set 2004-on

Chrome kits include brake pedals and mount plates. #90257 kit includes soft peg set.

PCP	Description
90256	Without pegs 2004-05
90257	With Iso pegs 2004-05
90287	With Iso pegs 2006-13
90304	With Iso pegs 2004-on +2”
90314	With foot pegs 2014-on
90315	With foot pegs 2014-on all black



XL Black Forward Control Kit

Gloss black further forward mid-control kit repositions controls 3” forward of the stock location. Includes control mounts, brake and shift levers, brake rod and necessary hardware for XL 14-on models.

39074



Forward Control Peg Adapters XL 2014-on

Allows use of male pegs on OE style forward controls.

PCP	Application
27420	Stock
27421	+2”



XL Billet Forward Control Kit

Chromebillet forward control kit for 4 or 5 models. Includes 5/8” bore master cylinder.

90300	1986-03
90311	2004-13

XL Forward Controls



883-1100-1200 Forward Control Kit 1986-03

For Sportsters 1986-03. Includes chrome brake and shifter assemblies, complete with all necessary brackets, pedals, linkage, o-ring pegs and hardware for installation. Use existing master cylinder for assembly. (Will not fit with engine guards)

90200 1986-90 4 speed
90201 1991-03 5 speed







XL Forward Control Kit 1991-03

Kit features XLC styling. Kit includes Cats Paw foot and shift pegs. OEM 49014-86A engine bar adaptor required to install engine bar #84106.

90206 Complete kit 1991-03
90284 +2" kit (no shifter pegs) 1986-03
39023 Cat paw foot peg, set all years
39025 Shift peg all years



Reduced Reach Forward Control Adapter

Use to reposition the footpegs and controls up and back by 2" to bring controls closer to the rider. Kit fits XL 2004-on models with forward controls


27422



Extended Reach Forward Control Conversion

Use to reposition the controls 6" forward on 2004-on XL forward controls. Reuse OEM controls, footpegs and hardware.

27423 Chrome
27424 Black

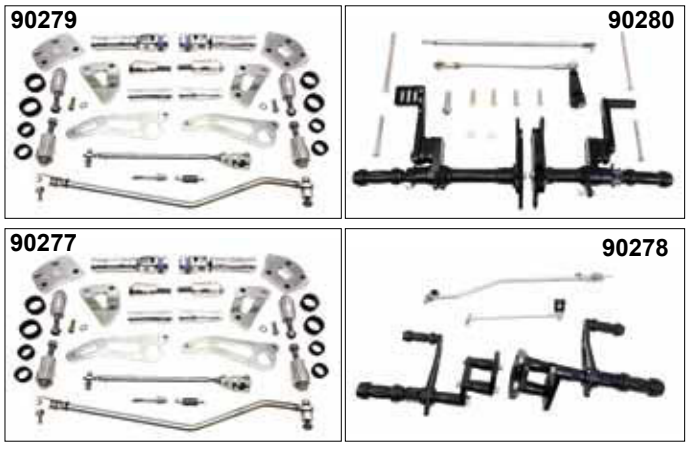

Billet Forward Control Kit

Billet forward control set with master cylinder and rubber belted foot pegs. Polished kits use a ¾" master cylinder and black kits use a stock master cylinder.

Polished	Black	Application
90279	90280	91-03 XL 883, 1200
90277	90278	04-13 XL 883, 1200









GMA Forward Controls for 1986-99 FXST

Streamlined chrome or black forward controls for stock or custom applications.

PCP	Peg Style	Finish
76494	Flat	Chrome
76495	Flat	Black
76496	Round	Black
76497	Round	Chrome



GMA Custom Rubber Banded Grips

Stylish rubber banded grips feature throttle pipe and choice of chrome, polished or black finish. Complements the style of BDL forward controls.

76254 Black
76255 Chrome
76256 Polished



Billet Forward Control Set for 1997-07 Touring

Chrome bolt-on kits for 1997-07 FLT models. Accepts stock master cylinder or order a master cylinder separately. Includes shifter shaft hole plug.

PCP	Item
90120	Control set
46713	Chrome master cylinder FLT 1999-07




Black Billet Extended Forward Control Set

Black powder coated billet aluminum 2” extended slotted style forward control kit with black concave footpegs. Fits custom application with 2000-on mounting holes.

90227

Forward Controls



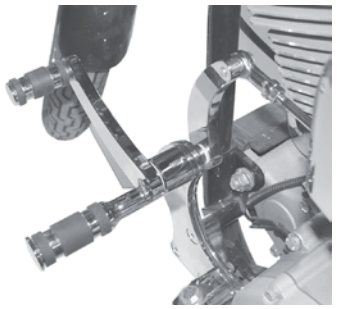

FXST Chrome Billet Forward Controls 2000-on

Set includes right and left sides and adaptor block to reuse stock kickstand. Order shift rod and stainless steel brake line separately. For custom application

59135 Control set 2000-06
59056 Chrome shift rod

FXST Brake Line Required Components

Sold separately.

PCP	Description
49717	45 degree fitting
49734	Banjo 10mm x 90 degree
49729	Banjo 10mm x 35 degree
24030	10mm Banjo bolt

Replacement Hardware

711 Master cylinder rebuild
73554 Master cylinder top



Chrome Adjustable Forward Brake Pedal

Allows multiple positions.

PCP	Application
46810	1991-99 FLST
46811	1997-07 FLT



Brake Pedal Rubber Only

23036 1991-on FLHT



Chrome Forward Pedals

PCP	Application
46805	FLST 1987-99, FLT 1999-07
46812	+2 1/4" extended FLST 1987-99, FLT 19897-07
46806	FLST 2000-01



Chrome Billet Forward Pedals

Custom pedals feature forged construction with milled slots.

PCP	Application
61077	2000-on FLSTC/F/S (not for use with OEM 41815-00 master cylinder cover)(42640-03)
61078	2000-on FLSTC/F/S (same length as early FL Softail) (42640-00)
46813	1987-99 FLST, FLSTF, FLSTS, 1997-07 Touring



Heel-Toe Shifter Peg Kit

Chrome and rubber flame shifter peg kit with heel toe shifters. Fits FL 65-84, FLT 79-on, FLST 86-on. Pair.

45091



Iso Brake Pedal Pads

Diecast chromed pedal pads feature rubber inserts to match peg styles.

PCP	Style
44103	Rail






Chrome Billet Forward Control Set
2” Extended version for 1986-99 FXST with pirate spike peg set, (order shift rod and brake line seperately).
90330



Billet Chrome Rear Passenger Peg Set
Pegs feature 3 rubber band inset to match billet forward controls.
59264



Chrome Billet Shift Rod Kit
Includes ball and swivel ends.
59269 Stock
59270 +3” extended

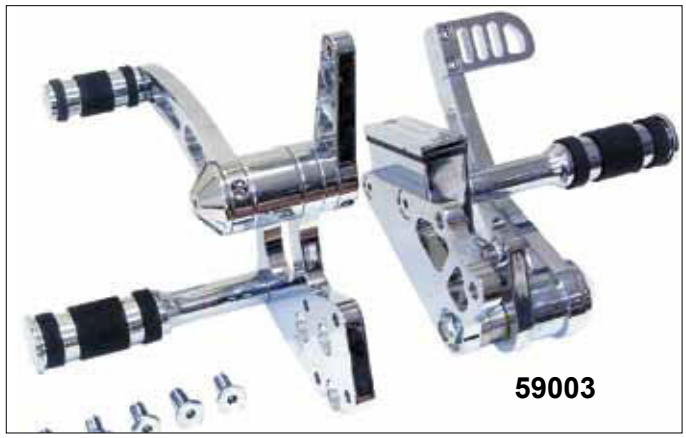





Chrome Billet Forward Control Set
Fits FXST 1987-99. Sets include left and right sides complete with master cylinder. Also includes rubber belted pegs as shown. Custom brake lines are required. #59056 has an adjustable end to be used as +2” or +3”.
Order shift rod and stainless steel brake lines separately.

PCP	Position	M/Cyl
59320	Stock	¾”
59003	+2”	¾”
59321	+3”	¾”



Stock Chrome Shift Rods
37210 1986-99 FXST 11” long
59269 1986-99 FXST (Billet for #59320)

+2” AND +3” Chrome Shift Rods
59056 1986-99 FXST 14” long

+3” Chrome Shift Rods
59270 1986-99 FXST (Billet for #59003)

Replacement Hardware
21663 3/4” Master cylinder kit
21684 5/8” Master cylinder kit
59319 3/4” Master cylinder only (2-1/4” c/c)
21659 5/8” Master cylinder only (2-1/4” c/c)
73554 Master cylinder top only with screws
59264 Matching passenger peg set
59322 Shift peg
59323 Shift peg rubber
73595 Brake plunger

FXST Brake Line Required Components
49729 10mm, 35 degree Banjo
49821 32” Stainless line
46151 T fitting
49764 12” Stainless line



21663

BT Forward Controls



Chrome Billet Forward Control Set
Fits 1986-99 FXST, 1984 FX, FL. Includes left side jockey pedal and right side complete with master cylinders. Source stainless steel brake and clutch lines separately.
90333



Billet Jockey Shifter Kit
Includes top mount and rod for 1986-99 FXST models. Order knob separately.
82107



3” Extension kit for Softail 2000-06
Moves controls 3” forward on FXST, FXSTD, FXSTX, FXSTB models.
59333

3” Forward Control Extensions for FX Softails
Will relocate the stock foot controls 3” forward on all 2000-2010 FX Softail models. Kits include chrome extension plates, extended shift rod and all necessary mounting hardware.
39162



Chr/Forward Control Bracket 2000-06 FXST
Bracket kit includes right and left mounting brackets and new bushing.
27306 33920-00



FXST-FLST Adaptor Brackets 2000-06
These brackets allow the use of pre 1999 forward controls on the Twin Cam models.
27343



2” Forward Control Extension Bracket
Will relocate the stock or custom forward controls 2” forward on 1936-99 BT models. Note: the hoses and linkage will also have to be extended. Includes 5 screws and has an alloy finish.
21688



2” Floorboard Extension Kits
Will relocate the floorboards forward 2” on all 2000-06 FL Softail models with original equipment floorboards. Kits include chrome extension brackets, shift rod and all necessary installation hardware .
39163



FXD Forward Controls











Chrome Billet FXD Forward Controls 1991-05

Fits 1991-05 FXD and includes rubber belted pegs. Includes left and right sides complete with master cylinder. Order shift rod separately.

59182 Control set stock
59854 Control set +3”
59183 Standard shift rod
59056 +2 and +3” shift rod
59319 Master cylinder (3/4”)
59671 Matching grip set
59264 Matching peg set



Co-ordinating Grips and Pegs

PCP	Item
59671	Grip set
59264	Peg set





Chrome Oval Inspection Cover

Fits FXD-FXST outer primary when forward controls are installed. Does not have a hole for shift shaft. FXD 1991-05 and Softail 1991-06

44500



Shift Shaft Primary Plug

Use when forward controls are installed on FXR-FXD models to seal the inner primary when eliminating the mid shift. Includes o-rings and hardware.

73519

FXR Forward Controls



FXR Billet Forward Control Kit 1982-94
Kit includes master cylinder.
59327 Kit with a 3/4” master cylinder
21663 Master cylinder kit only (3/4”)
59319 Chromed master cylinder complete





1982-up FXR Forward Control Set.
Complete set brake & shifter units are a replica of the comfortable FXST style, which has pegs in full forward position, features one piece brake rod which adapts directly to stock master cylinder, no need to relocate master cylinder on all 1982-on FXR-FXRS-FXRT, also 1985 FXS-FXE. Chrome cover included to cap shifter shaft after installation.

PCP	Years	Type
90309	1982-E87	Set
6462	1982-85	Shift side
59064	1982-94	Brake side
59065	1988-94	Brake side



FXR-FXRS Forward Control Sets.
All 5 Speed FXR-FXRS Evo 1982-94. Installation does not require the primary cover to be removed. All parts are chromed and the footpegs provided are “O” ring style. Does not fit Dyna Glide.
4703 1982-94 FXR



FXR Passenger Footrest Comfort Kit
Chrome plated, super strong 3/8” steel plates machined to ideally relocate the passenger pegs on all FXR models. The pegs are moved several inches higher and farther forward for improved passenger comfort. Complete with chrome plated hardware, the brackets can be used with stock footpegs or with any 1/2” stud mount footpeg set.
4513 FXR footrest kit (pegs not included)

½” I.D. Shift Shaft Cover
Chrome acorn style cover to fit over unused shifter shaft in primary cover when installing forward controls.
12609 Sold Each



FXST Forward Controls





FXST Forward Control Kits

Chrome plated OEM type replacements which include brake pedal, mount plate, plunger and related hardware for years listed are already equipped with a lower mount slave cylinder. The 1983-86 type uses two bolt master cylinder. The early 1987-89 type features tab with square hole to accept spark plug type master cylinder. The 1990-on type fits models with a frame mounted master cylinder.

Master cylinder not included.

PCP	Years/Model
90312	1984-86 FXST
90313	1987-89 FXST





Billet Forward Control Set 1987-99 FXST

Includes shift and brake side controls, stock length with rods included. Use with existing mid mount master cylinder on FXST models.

90334







Extended Forward Controls for FXST Models

Designed for big bikers over 6 ft. tall. These chrome plated units extend the foot pegs 4” forward and keep the right and left peg parallel while retaining stock peg to pedal distance. Utilizes stock brake pedal shifter arm and lever. Brake and shifter plate supplied in heavy 5/16” steel along with longer brake and shift rods. Can be installed in 1 hour for FXST, FXSTC and FXSTS.

90305	1986-E87 Ext. kit (will not clear stock filter)
90306	1987-99 Ext. kit
90307	1986-E87 Complete assembly
90308	1987-99 Complete assembly for 4” forward

***Note:** Above models fit 1986 models when oil filter on shift side is re-located. Can fit 1984-85 models if master cylinder bracket is fabricated and welded in place.

FXST Forward Controls



FXST Replica Forward Shifter Kit

Complete kit with all hardware necessary for installation 1985-99 FXST models. Use in conjunction with our FXST Replica Controls, as all kits place pegs in a forward position parallel to the peg on brake side. Foot rests on peg while shifting for added comfort. Kit includes chrome heavy duty shifter bracket, inner lever shifter lever, rod, rubber shift peg and foot peg, display packaged and labelled with detailed instructions and assembly diagram for each model listed below.

90225 FXST 5 speed 1985-89
90226 FXST 5-Speed 1990-99







FXST Chrome Forward Brake Controls

Forward brake control kit replaces original equipment on L1987 to present Softail models. Kits includes: rear brake control, footpegs, and mounting hardware. Retain original master cylinder and linkage for use with new kit.

PCP	Description
90218	FXST late 1987-88
90219	FXST 1989-on



FXST Forward Brake Control Kits

For use on all 1970-99 BT with Shovel or Evo engines equipped with hydraulic disc or drum brakes. Designed after the 1984-99 FXST which places the driver peg in back of the brake pedal, so the brake is easier to operate from this position. Redesigned to accept a Wagner or Kelsey-Hayes style master cylinder or a new GMA master cylinder. Also available with chrome KH or Wagner style masters hardware. Kits include linkage pedal mount plate and rubber covered footpeg.

PCP	Description
6309	Complete kit w/Kelsey type master cylinder
6308	Complete kit w/Wagner type master cylinder
46821	Brake pedal for above


Note: Kits use Russell stainless lines PCP **#49800** front and **#49802** from junction to rear caliper. Use tee **# 3370**.



FXD Chrome Billet Forward Control Set

Fits 1991-05 FXD and 1993-02 FXDWG includes left and right sides. This kit will utilize stock master cylinder in the original position.Included rod fits directly to master cylinder. Kit includes rubber belted pegs but shift rod must be ordered separately.


PCP	Item
90285	Set
59183	Chrome steel shift rod

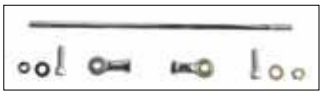

Dyna Forward Controls






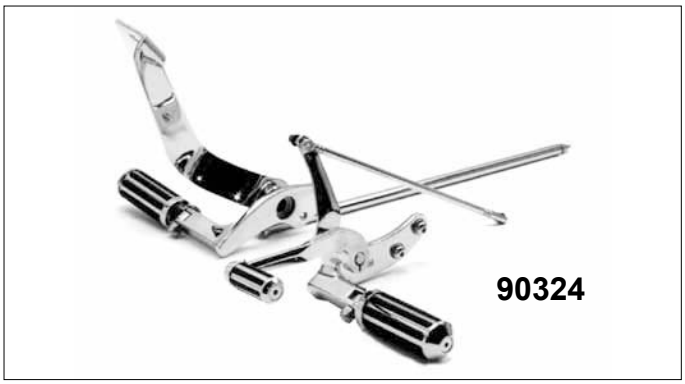

Dyna Forward Control Kits

Offered in stock and +2” extended versions for increased leg room.Will not work on FXD/L models with engine guard. PCP #90323 can be used as a stock replacement on 1991-05 FX-DWG. Order foot rest and shifter pegs separately for 2006-on models.

2006-on	1991-05	Item
90179	90323	Stock
-	90324	+2” Extended.

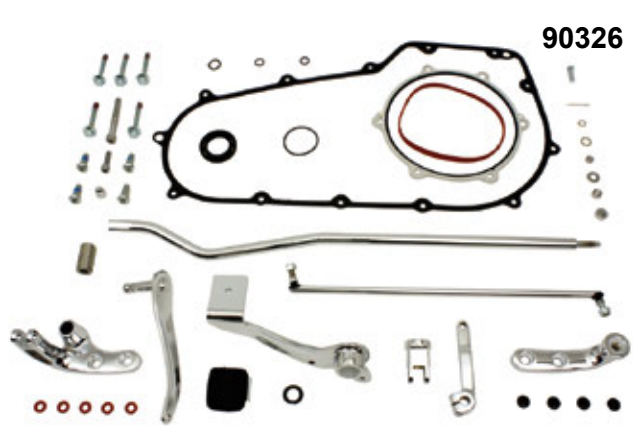

FXD/WG Forward Control Kit

Uses existing master cylinder linkage and footpegs.

PCP	Description
90326	2006-on Kit for mid-controls (49080-06A)



Dyna Controls Extension Kit 1993-05

Fits Dyna 1993-05 controls. Allows stock forward control pedals to be mounted forward for extra leg room. Fits FXDWG model for a 2” extension. Kit includes 2 chrome extension plates and extended chrome shift and brake rods. Installation requires the use of stock pedal components.

90325	Kit
46208	Brake rod only 1993-02 (41962-01)



FXDWG Forward Control Extension Kits

Allows stock forward control pedals to be moved 2” forward for extra leg room. Chrome kits include two extension plates, an extended shift rod and an extended brake rod. Installation requires use of stock brake and shifter pedal components.

PCP	Item	Fit
90332	Extension kit	2006-on
46208	Brake rod	1993-05

*Note: Features 2003-05 OEM stock styling

FLST Forward Controls



Brake Side FLST 1986-99

90321 Brake kit as shown
90322 Brake kit with chrome plate
27275 Chrome brake pedal (42407-87B)
23037 Rubber for above brake pedal (42416-83)
27277 Chrome mount plate (42431-87A)
16252 Black rod end (50992-87A)
61006 Master cylinder (42468-87D)
23014 Rubber boot (40922-87)
4048 Master cylinder cover (41745-79T)
10865 Master cylinder stud (42301-87A)
3782 Floorboard set (50621-79A)
20519 Pedal washer (5797A)



Chrome FLST Brake Pedal and Backing plate

Fits 5 speed FLST models 1986-99, FLT 1997-02.
27275 Brake pedal (42407-87B)
27277 Backing plate (42431-87A)



Grease Elimination Spacer

Stepped design spacer with o-ring replaces stock spacer (OEM 5702) on shift shaft FLT 1980-on.
11824

90320



FLST Brake and Shift Control Mounts 1986-99

Use these brackets and mounts to install FLST controls and floorboards on 1986-99 5 speed Softail models. Components can be ordered as a complete kit or separately. Floorboards must be ordered separately.

Shift Side

PCP	Description
90320	Shift kit without boards
27154	Shift mount plate 1986-99 (33630-90A)
27155	Floorboard mount strap (50990-86B)
16251	Chrome mount stud (50989-86)
37207	Inner shift lever FLST 1986-06 (33668-90B)
37516	Lever, 2 required (33895-82)
37210	Chrome shift rod kit with ends (33728-90A)



BT Chrome Forward Control Kit---1958-86

Control kit consists of both shift and brake sides including: a 3/4” bore chrome Kelsey Hayes style master cylinder, o-ring pegs (but can be replaced with other styles of clevis mount pegs), a universal nylon brake line kit, 4 and 5 speed shift rods are also included and chrome mounting hardware.
90318 BT 1958-86, FXST 1986-on. For custom app’s
21806 Shift lever only





Shifter Pegs

PCP	Style	Type
39019	O-Ring	Rotating
39017	Railer	Chrome with rubber
39024	Cats Paw	Chrome with rubber, 3/8” stud
39025	Cats Paw	Chrome with rubber, 5/8” stud
39018	Cats Paw	Chrome with rubber 1” longer
1402	O-Ring	Chrome with o-ring
1147	Stock	Black with 1/2” stud
5432	Stock	Black with 3/4” stud
5433	Stock	White with 3/4” stud



Chrome Heim Joints


Heim joints have a variety of uses and are especially useful for custom shift and brake linkage creation. The 5/16” joints are available with left or right hand threads.

PCP	Size
71009	1/4” x 1/4-28 female
71010	5/16” x 5/16-24 male
71011	5/16” x 5/16-24 female
71012	5/16” x 5/16-24 male (left hand thread))
71015	3/8” x 3/8-24 female



Left Side Shifter Lever Bracket

Chrome pedal mount for FXST 2000-06. Replaces 33683-00.
68405

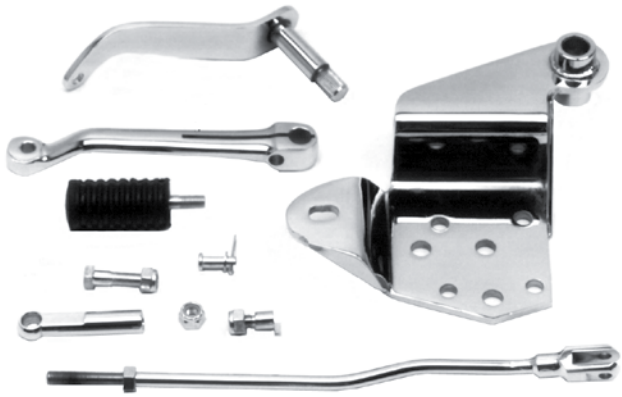

Forward Shifter Control

Original FLH type shifter kits allow the use of foot pegs or floorboards. Order complimenting forward brake controls. Units allow 1 down and 3 up shifting pattern. All other kits attach to existing components on shifter mechanism.

PCP	Years/Model
6319	1980-85 FXWG 4-speed, 1985 FXST 4-speed
90216	1982-94 FXR 5 speed



Chrome Brake Lever Pivot Cover Kit 1984-99

Use this kit to dress up the pivot area on 1984-99 FXST-FXWG. Include cover, retainer washer and allen screw.
45033



Right Side Rear Brake Pedal Mount

Chrome pedal mount for FXST 2000-06. Replaces 42507-00A.
68404

TC 88 Forward Controls



Twin Cam Components FXST-FXSTC 2000-05

Brake/shift side components for FXST, FXSTC 2000-05.

Brake, FXST

PCP	Description
12546	Jam nut (7951)
11085	Retaining ring (40918-87) (10 pk)
13203	Return spring (40920-87)
23014	Pushrod boot (40922-87)
46724	Black master cylinder assembly (41755-99)
46027	Pushrod kit (41957-97)
3245	Brake lever pad (42532-82)
61025	Resevoir (42454-99)
23063	Gasket, resevoir (42455-99)
61042	Chrome brake lever (42515-00A)
11705	Spring retainer (44126-87)
63013	Chrome resevoir cover (45149-99)
N/A	Rear brake line (45156-00)
10516	Grease fitting (50972-75) (10 pk)
18606	Bushing (57215-75) (pair)
24030	Banjo bolt (41747-82A)
1945	Rebuild kit (42382-87B)
10182	Clevis pin (42460-80B) (each)
28203	Stop lamp switch (72023-51C)



Twin Cam Components 2000-05

Brake/shift side components for FLST, FLSTF, FLSTS 2000-05.

Brake, FLST

PCP	Description
N/A	Kit as pictured
12546	Jam nut (7951)
11085	Retaining ring (40918-87) (10 pk)
13203	Return spring (40920-87)
23014	Pushrod boot (40922-87)
46027	Pushrod kit (41957-97)
23037	Brake lever pad (42416-83)
61025	Resevoir (42454-99)
23063	Gasket, resevoir (42455-99)
61043	Chrome brake lever (42597-00)
11705	Spring retainer (44126-87)
63013	Chrome resevoir cover (45149-99)
N/A	Rear brake line (45156-00)
10516	Grease fitting (50972-75) (10 pk)
18606	Bushing (57215-75) (pair)
24030	Banjo bolt (41747-82A)
1945	Rebuild kit (42382-87B)
10182	Clevis pin (42460-80B) (each)
28203	Stop lamp switch (72023-51C)



Shift (left side) FXST

12001	Nylon washer (6057)
14562	O-ring (11191) (10 pk)
37205	Shift lever (33660-90B)
61055	Lever bracket (33683-00)
18635	Bracket bushing (33708-94)
36133	Shifter rod kit (33719-79A)
37518	Shift lever arm (34564-90A)
3247	Shifter rubber (34611-65)
1147	As above, all rubber



Shift (left side) FLST

N/A	Kit as pictured
12001	Nylon washer (6057)
14562	O-ring (11191) (10 pk)
36133	Shift rod kit (33719-79A)
37207	Shift lever (33668-90B)
18635	Bracket bushing (33708-94)
37516	Shift lever arm (33895-82)
3247	Shifter rubber with chrome end (34611-65)
1147	As above, all rubber

Refer to OEM Parts book for breakdown

Driver Floorboards





Mini-Floorboard Kits & Peg Mount Kits

Adjustable and clamp on mini-boards are now available for models listed. Black mat and chrome boards are sold in kits. Peg mount kits are available for models listed and will accept clevis mount pegs.

Adjustable Foot Peg Mounting Kits Only

39070 For forward controls Softails, Dynaglide and FXWG 4 speeds 1983-on
39071 For FXR rear 1982-94 & FLSTC 1990-on
39072 For rear passenger Softails 1984-on and FLSTC L1987-89 (1990-on FLSTC can use #39071)

Shaker Adjustable Mini-board kits (Passenger)

39076 Shaker kit for FLT,FLHT,FLHS 1987-92



FXD Footboard Kit

Touring style footboard kit for 1996-09 FXD models. Includes footboards, mounts, brake pedal, extended brake rod, heel-toe shifter, toe shifter, mid shift retainers and hardware. Cannot be used with stock engine guards.

90207 Kit
84155 Engine guard 1999-05



Adjustable Driver's Mini Floorboard Kit

Measures 7-1/4" x 3-1/2". Fits into stock female footpeg clevis on models with forward controls and features 7/8" of fore-to-aft movement. Can be rotated in a 360 degree arc. Fits FXDWG, FXST/C/S/SB and 4 speed FXWG models 1986-on.

59755









Billet Floorboards 1980-on FLT & 86-on FLST

"D" Shaped floorboards are chrome with black molded rubber inserts.

PCP	Design
39047	Diamond
39087	Rail
39088	Flame
39091	Wave

Driver Floorboards



Chrome Driver Footboard Set- Diamond
Chrome billet bigfoot footboard set with a diamond design and rubber inlay. Fits 1980-on FLT and 1986-on FLST.
39097



Chrome Driver Footboard Set- Railed
Chrome billet streamliner footboard set with a rail design rubber inlay. Fits 1980-on FLT and 1986-on FLST.
39092



Black Slotted Passenger Footboard Set
Black footboards with silver ball milled slots.
39073



Chrome Driver Footboard Set- Diamond
Chrome billet streamliner footboard set with a diamond design and rubber inlay. Fits 1980-on FLT and 1986-on FLST.
39094





Stream Liner Board Sets
• Fits 1980-on FLT and 1986-on FLST models.

PCP	Finish	Type
59926	Chrome	Footboard
39124	Black	Footboard



Chrome Driver Footboard Set- Shark Fin
Chrome billet streamliner footboard set with a chrome slashed design and rubber inlay. Fits 1980-on FLT and 1986-on FLST.
39095

Driver Floorboards



Chrome 'D' Shaped Floorboards
Feature ISO design with rubber inserts in stainless steel grid. Pair.

PCP	Year	Model
39083	1940-85	FL-FLH
39084	1980-on	FLT, 1986-on FLST





Chrome Billet Floorboard Pads Only
Include Iso bushings for 1980-on FLT and 1986-on FLST.
39085



Chrome Floorboards with Pad (No Logo)
Floorboards feature rubber pads for 1986-on FLST/F/N/S and 1980-on FLT/HT, FLTR.
19856 (50599-89T)



Stream Liner Footboard Set
Fits 1980-on FLT and 1986-on FLST models.
59926 Chrome
39124 Black



Chrome Floorboard Trim
Floorboard inserts are fitted to an iso-mount floorboard top to fit 1980-on FLT, 1986-on FLST models.
39082





Long John Billet Board Set
Fits 1980-on FLT and 1986-on FLST.
39086

Driver Floorboards



New-Style Late Model Floorboards

Fits all 5-speed FLT, FLHS, Heritage Softail® and FLSTF models from 1980-on.The oval 'shaker' sets have the mounting brackets offset from the centre of the floorboards. Depending on which way they're installed, you'll end up with your feet approximately 1" further ahead of or behind the stock position. This adjustment permits your choice of foot placement. The rectangular and oval 'shaker' floorboards will replace stock items.

Floorboard Sets

PCP	Description
3782	Rectangular 'shaker' floorboard set (50621-79A)
39049	Oval as above (for nostalgic look) (50599-89T)

Replacement Parts

1224	Rectangular pads (50614-66) (pair)
1363	Oval pads (pair)
4701	Replacement bumpers (50620-74) (set of 8)
39046	Rectangular floorboard upper plate including pad (ea)
39043	Oval floorboard upper plate including pad (each)



Big Twin Footboard Pads 1991-05

Black replacement driver rubber pads for all isolator style footboards. Pads and mounts are moulded in one piece for reliability. Stock on 1991-95 models but retrofit on all isolator style footboards.

23200 Sold each

Black cushion style passenger footboard pads include cushion air pockets to absorb vibration for more riding comfort. Will fit all HD passenger footboards, stock on 1991-95 dressers.

23201 Sold each



Footboard Hinge Bolt Kit

Chrome plated reproduction of special shoulder bolt to replace 50635-82. Fits all 1982-on FL and FX with footboards. Complete with chrome washers and locknuts.

72125



Chrome Driver Footboard Set- Railed

Chrome billet bigfoot footboard set with a railed design rubber inlay. Fits 1980-on FLT and 1986-on FLST.

39098







Adjustable Floorboard Kits

The design of these adjustable floorboard kits provide the rider with a position choice. These kits allow a full seven inches of front-rear adjustment. Angle and height adjustment are also adjustable. Kits were designed to fit all FXWG 1980-86 and all Softail/Dyna models 1984-on (except Heritage and Fat Boy™). They may be installed on any motorcycle with clevis-style footpeg mounts. They will also fit on the rear of Softail® models as passenger floorboards. Hardware included.

39050	Kit with "D" style shaker floorboards
39051	Kit with oval shaker floorboards
39053	kit with oval solid floorboard

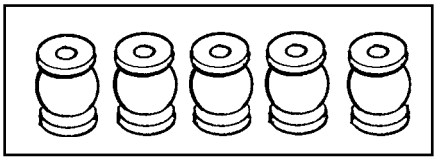

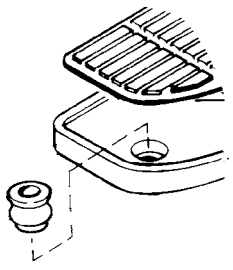

Late Style Bumper Set

4701 Set of 8 (50620-74)



Chrome Driver Footboard Set- Teardrop
Chrome billet streamliner footboard set is teardrop shaped with a rubber inlay. Fits 1980-on FLT and 1986-on FLST.
39096



Half-Moon Black Perforated Driver Footboards
Black footboards have round holes. Fits 1980-on FLT, 1986-on FLST.
39099



Chrome Driver Half Moon Footboard Set
Chrome footboard set with a rubber inlay and riveted border. Fits 1980-on FLT and 1986-on FLST.
39251



Tapered Long Footboard Kit
Long and skinny floorboards feature a sleek tapered design and stylish chrome surrounds. Kit includes left and right complete footboards with rubber inserts. Does not work with OEM# 50206-98 or 50205-97 footboard fringe. Fits 1986-on FL Softail models, stock on Softail Deluxe.
64837 50634-05



Rider Divided Footboard Kit
Inserts can be used to customize the look of Softail Deluxe models. Inserts feature a hip divided design with perforated center channel and crest. Kit includes left and right inserts which install easily and retain vibration isolation for added comfort. Fits on 2005-on FLSTN and models equipped with PCP#64840 tapered footboards.
64839 50363-05



Chrome Driver Footboard Set- Flame
Chrome billet streamliner footboard set with a flame design rubber inlay. Fits 1980-on FLT and 1986-on FLST.
39093

Driver Floorboard Mounts





Chrome Footboard Mount Set for FLT
4 piece set. Available in stock or +2” forward.

PCP	Type	Finish	Year
39132	Stock	Chrome	1983-08
39004	+2”	Chrome	1983-08
39005	+2”	Black	1983-08



Chrome Footboard Mount Bracket Kit
Use existing hardware. Fits FLT 2009-on stock type.
39006 47365-09



Footboard Forward Relocation Kit
Will re-mount footboards 1” forward on 1997 and later Touring models, (FLT-FLHTC-FLHR)
27407



Driver Footboard Extender Kit
Kit features a black finish and extends the driver footboards outward 1-¼”. Fits FLT 1983-2008.
27201



Driver Footboard Extender Kit
Kit features a black finish and extends the driver footboards outward 1-¼”. Fits FLT 2009-on.
27203



FLT Chrome Rear Passenger Floorboard Mounts
Fits 1993-09 FLT, FLHT, FLHS models and replaces OEM 52719-93 and 53070-00.
59302

Passenger Floorboards



Tapered Passenger Footboard Kit
Long and skinny floorboards complement PCP#64837 and feature a sleek tapered design and stylish chrome surrounds that add a custom shine even when folded up. Kit includes left and right passenger footboards with rubber inserts. Fits 1986-on FL Softail and Touring models equipped with passenger footboards. Can also be installed on models using passenger footpegs by the separate purchase of an appropriate footboard support kit.
64838 50396-05



Passenger Floorboard Covers 87-05 FLT-FLST
These easy to install covers enhance the look of the rear passenger floorboards. Fits touring models with stock passenger floorboards or other models with OEM accessory floorboards. Replaces OEM 50782-89. Screw caps not included. Note: Drilling and tapping required.
39060 Pair



Passenger Floorboards for Touring Models
Add these floorboards for added passenger comfort on long trips. Chrome plated finish with non-slip ribbed rubber surface, reducing fatigue and vibration discomfort. Set of floorboards comes complete with necessary mounting parts, bolts, nuts, spacers and brackets. Fits all FLH's and FLT's.
2436



Black Rubber Passenger Board Sets
Fits 1986-on FLT, 2000-on FLST, FXST and 2006-on FXD models equipped with footboard supports. Replaces 50752-04.

Chrome	Black	Style
39252	39172	Ribbed
39253	39173	Block



NEW ITEM
COMING SOON

Extended Rear Rider Floorboards
Extends board 1.5" forward of the stock position. Accepts original mounts. Fits Touring models 02-on and also 97-01 Touring models when equipped with extended reach billet style brake lever (42638-03).

Chrome	Black
39175	39174

Passenger Floorboards






Passenger Footboard and Swingarm Mount Kit

Kit includes right and left chrome pivot caps, chrome passenger footboard mounts and chrome passenger footboards with rubber pads.

PCP	Application	Flootboards
39081	1982-06 FLT	Streamliner
39167	1982-06 FLT	Stock
39166	2007-08 FLT	Stock

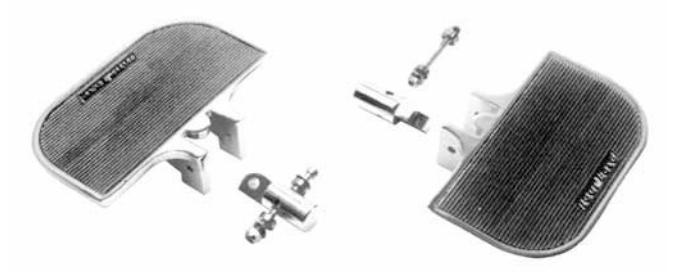

FXST Rear Floorboards

Chrome mini boards feature spade type mounting studs, with 2 position angle hole. Studs mount to all applications that originally fitted with a 49117-77 peg.

39052



Black Mini Footboard Set

Custom black metal footboards with raised rails for better grip. Measures 8” long by 4-¼” wide.

39007



FLT Chrome Passenger Footboard Set

Includes right and left rubber pads with chrome footboards, chrome mounts and pin kit. Fits FLT 1993-09

PCP	Footboards
39250	Stock



Chrome Passenger Footboard Set

Fits OEM style brackets and will accept rubber pads from FLT 1986-on. (includes mounting pins)

39056 50752-04

73541 Replacement mounting pin set (4 pieces)



Chrome Passenger Footboard Set

Chrome passenger footboard set includes rubber pads and will fit OE style brackets. Fits FLT 1986-on.

39058

Passenger Floorboards



Chrome Mini Passenger Footboard Set
Chrome billet mini passenger footboard sets feature a rubber pad design. Use to replace passenger pegs with a male clevis mount.

PCP	Style
39063	Tri-Pad
39064	Maltese Cross
39067	Diamond
39068	Flame



Billet Mini Footboard Set
Fits passenger peg mounts that accept male pegs.
21773



Chrome Shark Fin Passenger Footboard Set.
Billet chrome passenger footboards with black rubber pad and chrome rail inserts. Fits 1986-on FLT models.
39061



Mini Footboards

PCP	Design
39245	Rubber
39246	Flame
39247	Rail
39248	Diamond



Chrome Passenger Footboard Set
Chrome boards with rubber pads can flip-up when not in use. Fits FLT 1997-on.
39254



Chrome Passenger Footboard Shell Set
Passenger footboard shell only. Order rubber inserts and pins separately.
39033

Passenger Floorboard Mounts



Chrome Adjustable Passenger Footpeg Mount
Kit mounts to existing rear mount to accept male peg set.
27217 50787-09 FXST 2007-on



Chrome Passenger Footpeg Mount Kit
Fits 1993-on FLT models with male mount style passenger footpeg supports.
27216 50763-09



Adjustable Passenger Footboard Mount Set
Chrome finished mount set for FLT 1993-09.
27206 50768-07



FXST 1986-06 Rear Peg Mount Set
21763



Passenger Board Mount Kits
• Fits 1993-on FLT and 1986-on FLST models.

Chrome	Black	Style
39168	**39169**	Reduced reach mounts for FLT 1993-on
39170	**39171**	Adjustable mounts for FLT 1993-on



FLT Rear Passenger Peg Brackets 1993-on
Adjustable to replace stock rear footboards. Brackets and male pegs sold separately or as a kit.

PCP	Item
39116	Brackets
39021	Peg set
59301	Kit



FLT Rear Passenger Peg Brackets 1993-on
Adjustable to replace stock rear footboards. Chrome brackets and railer male driver pegs.
39243 Kit



Cats Paw Heel Rests
39136



Iso Brake Pedal Pad
Pedal Pad features 3 pad inserts in chrome body.

PCP	Description
39224	Fits Heritage, F/Boy and Dresser



Black Rubbers for Extended Pegs
Replacement rubbers are1” longer than stock for the extended pegs used with forward controls. Pair.
23109





Iso Stirrups
Feature adjustable heel and will fit driver peg mount or highway bars where a small peg is used.
39221 Stirrups with large pegs
39222 Stirrups with small pegs

Pegs & Mounts



Chrome Footpeg Set with Ribbed Rubber Inlay
Chrome male end mount driver foot peg set with integrated non-slip rubber footrest. Fits all models with female mounting block.
39123



Chrome Highway Bar Footpeg Sets
Chrome footpegs with male end are fully adjustable up to 180° for the desired angle. Set of two pegs to fit all models with female mounting block.

PCP	Design
39002	Chrome skull with black eyes
39003	Chrome flames on black







FX Passenger Peg Sets
Peg sets with chrome ends to replace OEM 50907-69A.

PCP	Foot Peg Style
39138	Cat Paws pegs with ½”-20 stud mount
39139	Chrome O-ring pegs



Dyna Glide Chrome Hi-way Bar Peg Mounts
Includes chrome plates and bars to accept a male style peg for 1995-09 FXD/C.
39153 49019-95
39121 As above with Cats Paw pegs



Billet Footpegs, Shifter and Brake Pedals
Chrome billet pegs can be used with billet kits or can be adapted to other kits. Footpegs include pivot yokes with 3/8” bolts, shift brake pedals have 5/16” threads. Sold in pairs.
39133 Footpegs
39134 Shift & brake pedal
39137 Front pegs with male end



Black Left Side Driver Footpeg Mount
Fits XL 2004-on.
27401 42972-04



Rear Peg Relocation Kit FXST 1984-99
Includes chrome brackets and Cats Paw soft pegs.
39244



Chrome Passenger Peg Brackets
Fits 2004-13 XL models. Order male pegs separately.
39242



Chrome Peg Mount Set
Fits FXD-FXDWG models 2006-on
39241



Chrome Passenger Footpeg Mount Set
Chrome raised type features a 1.5” rise and is 2” more forward than stock. Order male pegs separately. Fits FXD and FXDWG 2006-on.
27402



Foot Peg and Shifter Sets
These matched sets, available in a wide variety of styles, feature a male peg set and a shifter peg to fit forward controls.

PCP	Style
59984	Bullet
59985	Batique







Chrome Billet Peg Sets

PCP	Item	Design	Finish
59988	Peg set	Skull	Chrome
59989	Peg set	Knuckle	Chrome
39008	peg set	Knuckle	Polished
39038	Peg set	Skull	Chrome w/rubber inserts



Black Skull Footpeg Set
• Skull face footpeg set with male end mount & rubber inserts
• All models with female mounting block
39036

Pegs & Mounts



Sportster® Forward Peg Set
Complete with a pair of chrome O-ring footpegs and all of the necessary hardware for the newer alternator equipped models. This peg set mounts between the lower engine mounts. The mount will accept most female mounting pegs.
4446 Fit Sportster® models from late 1984-03



Sportster Adjustable Highway Peg Kit
Fits XL late 84-on with alternator. Kit includes: right and left chrome supports with Cats Paw pegs that adjust into three height positions; to fit with engine guard kit. Not 1999-on XL 883C/1200C.
39240 1985-2003 (49503-96)
59586 2004-on with mid controls



XL Chrome Adjustable Highway Peg Mounts
Kit includes chrome adjustable mounting arms and clevises, black mounting brackets and required mounting hardware. Can be mounted in three pre-set positions and accepts most standard male mount pegs. Fits Sportster models 2004-13.
71036



3-Piece Frame Bracket
Chrome-plated, super heavy-duty clamps. The unique 3-piece design eliminates spreading the clamp to fit over frames and safety bars for quick easy installation and a long-lasting custom appearance.
3-Piece Frame Clamps (Sold in Pairs)

PCP	Size (for 1/2" Peg Mounts)
3219	7/8" Clamp



3-Piece Frame Bracket
Chrome super heavy duty clamps feature a 3 piece design that eliminates the need to spread the clamp over frames and safety bars. These custom look clamps install quickly and easily. 3/8" Mount Hole.

PCP	I.D.
44046	1"
44047	1-1/8"
44048	1-1/4"



Extended Pegs
1" longer than stock made yoke end pegs, fits FX & FXST passenger pegs and FXST, FXWG driver peg. Sold in pairs.

PCP	Style
39140	Rubber with chrome caps
23109	Black replacement rubbers (pair)
39141	O-Ring style
39034	Cats Paw ISO style with yokes
39018	Extended Cats Paw shifter (each)



Live to Ride Foot Pegs
Beautifully chrome plated, large driver foot pegs “Live to Ride” rubber insert. Solid peg. Looks great.
39500 Pair



Railroad Spike Billet Peg Set
21786 With male ends



Passenger Peg Relocation Brackets for FXST
These chrome brackets install quickly and easily under the stock mounting screws that attach the fender struts to the frame on Softail® models. They relocate the OEM passenger footpegs to a more comfortable position for passengers who like to lean back against the sissybar. They fit all FXST models 1986-06. Sold in pairs.
39152 FXST and FLST 1984-06 (footpegs not included).



Krome-Railers
These are designed with chrome body with rubber “rails” inserted for good grip. Peg diameter is mid size between small and large diameter pegs.
51204 Handle bar grips
39014 Male pegs, large, FXR driver (1-1/2” o.d.)
39015 Male pegs (1-1/4” o.d.) small & FXST driver
39016 Female pegs, large driver
39017 Shift peg
39013 Female pegs for 5/8” square bars
39201 Kicker pedal



Cushion Footpegs
Two larger than stock footpeg sets use the vibration-absorbing technology of the OEM FXR footpegs. The FXR version is longer than the stock footpegs and has the male shanks at an angle that insures maximum vibration absorption. The other version is approximately 1½” longer than stock footpegs and may be used with any stock female clevis. They work extremely well on FXWG and FXST models. Both versions have chrome end caps. Sold in pairs.
39010 Fit the front of all FXWG, Softail® models, & Dyna Wide Glides (except Heritage and Fat Boy®) from 1980-on, or any female footpeg clevis.
39011 Fit all FXR’s (except FXRD and FXRP) from 1982-94 as well as Dyna Glide™ and 5-speed Sportsters® 1991-on (except Dyna Wide Glide)

Pegs & Mounts



Kick Pedal and Shift Pegs

PCP	Type/Model
1400	Flat kicker pedal (50908-88T) (each)
1401	Kicker pedal all (50902-84T) (each)
1402	O-Ring shift peg 1/2” long (34631-84T) (each)



Custom Pegs

763 Clamp on 1-1/4” (pair)
764 3/8” Stud mount pegs (pair)
39001 Pegs only, fits 5/8” square blocks (1/2 x 20)



Driver Pegs (Pairs)

765 Large FX-XL driver peg, female (52651-85T)
39000 FXR Large driver peg, male end 1982-90 (50913-89T)




Passenger Pegs

4709 FX-XL rear passenger pegs, hiway-bar male end, small diameter (50901-84T) (pair)
39141 Extended, as above, 1½” longer

Replacement O-Rings for Pegs (10 Packs)

2466 O-Rings for small pegs (49031-84T)
2464 O-Rings for large pegs (49028-85T)
2467 O-Rings for flat kick pedal (49029-85T)
2465 O-Rings for shifter peg (49030-84T)



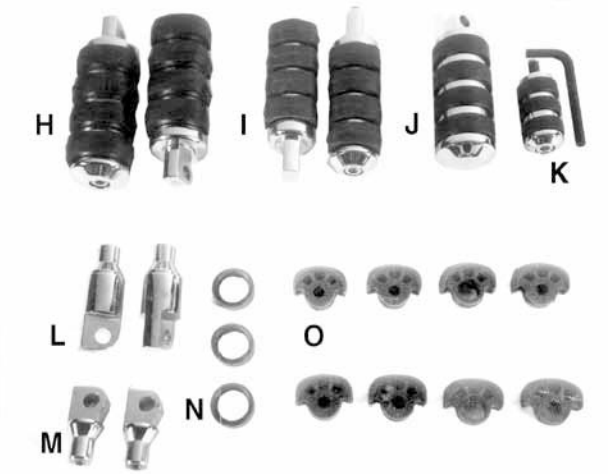

Cats Paw Pegs

Unique soft rubber pad is an inserted cleat isolastically mounted on chrome Allen socket bolt and yoke stem. Vibration is reduced. Sold in pairs, matching shifter, sold each.

PCP	#	Description
39020	A	Large driver female end 52-on FX & Sportster
39026	E	Mt. yoke for above, female
39021	H	Large driver, male FXR 1982-on
39028	M	Male yokes for above pegs
39023	I	Passenger, rear 1973-on FX-XL- FXST-FXWG, front 1981-on male end, OEM type hiway pegs
39034	G	Peg set as above pegs 1 “ extended
39028	M	Stock size mount yokes for above, male
39035	L	1” Extended male yokes, above
39032	J	Kicker pedal
39022	B	5/8” Female type for custom hiway pegs
39037	C	As above, clamp-on set
39027	D	5/8” Female yokes only for above peg
39024	K	Shifter peg 3/8” stud
39025	K	Shifter peg 5/8” stud
39018		Shifter peg 1” longer
39030	F	Rubber only for #39020 and #39021 (8 pack)
39029	O	Rubber only #39022 and #39023 (8 pack)
39031	N	Rubber only for #39025 (3 pack)



Chrome Cap Shifter Peg
Replacement shifter peg with chrome end cap pressed over rubber peg. Sold each.
3247

Chrome Cap Pegs
Replacement XL-FX drive peg with chrome end cap and chrome mounting block.
3248 Driver/Passenger (pair)

FX, XL Kick Pedal
Black with chrome end cap 33178-63).
3250



Magna Ring Pegs
Features heavy duty flat rubber ring with chrome centre shaft and slightly flared end cap. Pairs.
39120 Male mount 1” extended



Chrome Billet Flame Peg Set
59753 Male ends



Stock Type Passenger Pegs
Stock replacement FX style passenger pegs 1/2 x 20. Sold in pairs with chrome plated ends. OEM #50907-69A.
1484 Black rubber peg set
39138 Cat paw peg set
39139 Chrome o-ring peg set
4706 Rubber only (pair)

Stock Style Replacement Peg
Without blocks. Replaces OEM #49117-77.
1483 Stock peg (pair)

Foot Peg Mounting Yokes
Chrome plated. Mounts are available in 1/2” fine thread mounting holes. Sold in pairs.

PCP	Thread	Length
3779	1/2”	1” (50900-72)
39126	3/8”	1”
39127	1/2” x 13	1”
39128	Thru hole 3/8”	1-7/8” (50942-00)






Chrome Mustache Bars
Bar includes a Cat Paw peg set and should not be used with a front engine bar.
39079 FLST 1986-99

Pegs & Mounts



XL Passenger Peg Mounts
For XL models 1982-03 to mount passenger pegs to swing arm. Choose pegs to complete.

PCP	Description
3043	Mounting set (50610-86T)
1483	Pegs with caps
4709	O-Ring pegs
39023	Cats Paw pegs

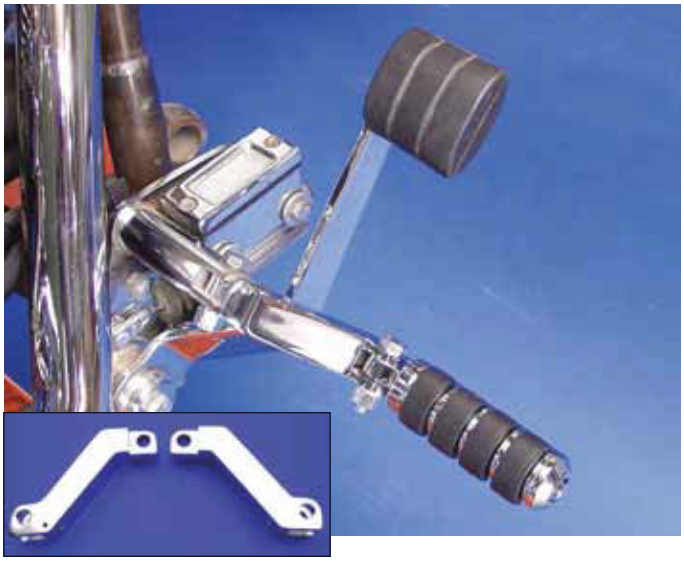

Chrome FXST Footpeg Extension
Use extension to position the peg 2” forward and 3-1/2” wider on an FXST. Shown on PCP# 6309 FXST forward controls.

PCP	Description
39112	4” Peg extension
6309	Kelsey type brake forward controls FL-FX 1970-99, FXST 1984-99

Mega Pegs
Universal chrome 5/8” square peg for highway bars. Pegs have molded rubber inserts and a center allen screw that allows for adjustable angle position.
39125





Chrome Chopper Pegs
Each peg set includes threaded mount block.

PCP	Style
59202	Hex



Spoon Style Clamp-on Footpeg Sets
Chrome plated peg with zinc clamps and hardware have a folding type mount block. For 7/8” and 1”
59551



Billet Rocket Pegs
Male end pegs include heavy duty o-rings.
39039



FLT 1993-on Chrome Adjustable Footpeg Mounts
39116 Set



Footpeg Extensions
Stretch out in comfort with our footpeg extensions. They are polished and plated to a brilliant luster. Pairs available in two lengths: 4” and 4-5/16”, both with a 2” drop from centerline.
39112 4” length









Billet Chrome Pirate Spike Peg Set

PCP	Description	Length
59572	Peg set with male ends	6”
59573	Peg set with folding mounts	5.5”
21657	Peg set with folding mounts	6.5”
73628	Shift peg	3.25”



FXST Rear Peg Mounts 1986-06
Bolts to rear frame and repositions pegs to a more comfortable position.
21763



Anti-Sad D-Clips
Puts pegs back to a level position. Sold in pack of 10.
71007



Original Style Footrests
For use on 1” diameter safety bars or frames. Sold as pairs.
19596 49100-58




Batique Billet Peg Sets

PCP	Style	Length
59986	Folding	8.5”
59987	Male	6”



Chrome Ammo Footpeg Set
AK47 bullet shaped footpegs with male end for 1986-on FXST models.
39012

Pegs & Mounts

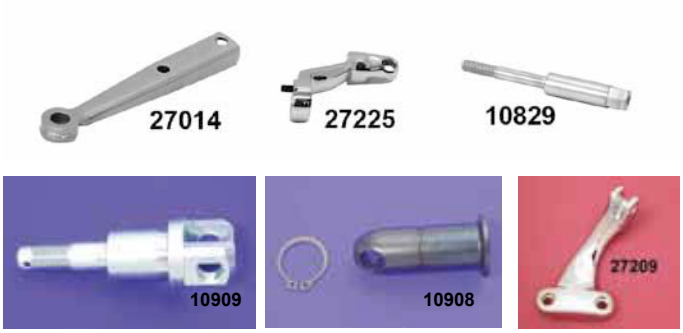

Foot Rest Supports and Studs XL 1980-on

PCP	Application
27225	Left support 1986-90 (50948-86A)
10829	Right stud 1986-90 (34886-86A)
27209	Left support 1991-03 (50951-90)
10909	Right peg clevis 1991-03 (42441-90A)
10908	Right pivot stud 1980-90 (42441-80)
27013	Right MC support bracket 1983-90 (34909-83)
27014	Right MC support bracket 1991-03 (34909-90)



Footpeg Arm Mount Studs

Studs feature a spline with 1/2” threaded end, longer type is keyed for FXR models.

21006 2-7/8” (50921-83)
10843 2-3/8”



FXR Passenger Peg Kit 1982-94

Use this kit to move passenger footpeg forward and higher. Kit includes chrome brackets and bolts. Stock or custom 1/2” stud footpegs can be used.

27314



Footpeg Mount Kit

Allows male type pegs to be mounted to a 1-1/4” diameter engine bar.

39129



Chrome FXR Driver Peg Mount Brackets

These brackets are for use with male style pegs and fit all FXR models 1982-94.

PCP	Application
27310	Right mount (50531-81)
27311	Right extension (50636-81A)
27312	Left extension (50639-81)
27313	3 Piece set of above



Chrome Foot Rest Support Bracket Kit
Fits XL's 1972-on, FXST 1984-on (50900-72). 1/2" Mount bolts.
3779 Sold in Pairs



Red Baron Billet Kick Pedal
Features chrome axle shaft.
59581



Red Baron Peg Set
Billet chrome pegs feature a steel shaft and male peg ends.
59596



Billet Peg Sets
Chrome pegs feature rubber inserts to fit male applications.

PCP	Style
39040	Gothic





Foot Peg to Bar Clamp Kit
Fit 1-¼" engine bars to mount male peg sets.
27394



Stock Type Highway Bar Assembly
For FXR/RS models 1982-94.
5790






FLT Rear Peg Kit 1993-on
Includes chrome brackets and large Iso peg set. Replaces rear passenger floorboards.
59301



XL Rear Passenger Peg Relocation Bracket
Fits 2004-13 XL models with Radii pipe set. Black.
27371

Pegs & Mounts

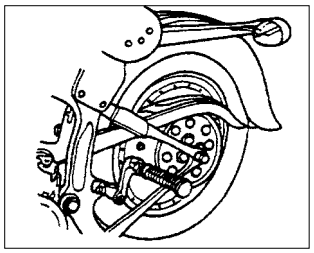





Chrome Adjustable Foot Peg Mount Kits

Pegs can be rotated to different positions using the detent locking system and the yoke provided fits into the stock female footpeg clevis on models that accept a male end peg. Order pegs separately.

PCP	Description
39113	FXST 84-*, FXDWG front 1983-94
39115	FXR rear 1982-86, FLST rear 1990-on
39116	FLT 1993-on to replace passenger floorboards



Rear Peg Relocation Brackets


Use these chrome brackets to place pegs in a more comfortable position.

PCP	Application
39152	1984-on FXST
39103	1986-on FLST



Druid Billet Peg Sets

59744 Male ends

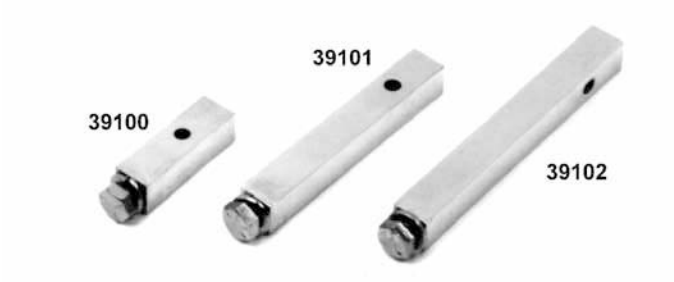

Chrome 5/8” Footpeg Bars

These footpeg bars include a 3/8”-16 x 3/4” grade 5 chrome-plated bolt and lockwasher, and are commonly used as replacements for broken motormount pegs.

39100	2” long (sold each)
39101	4” long (sold each)
39102	5” long (sold each)
39105	3” long (sold in pairs)



Maltese Billet Footpeg Set

Fits male end applications.

59509 Set



Chrome Billet Slugger Peg Set

59754



Billet Bullet Peg Set

Features male end with rubber buttons on foot surface.

59743



Chrome Offset Peg Mount Set
Mounts are 2” offset with 3” extension. Mounts accepts 1/2” x 13 bolts.
59300



Mini Footpeg Clevis Set
Accepts all male end pegs. Smooth design with flush allen screws.
59295



Chrome Footpeg Mount Kits
Kits include clamp set and 3.5” extension bars to accept male pegs.

PCP	Size
59297	1”
59298	1-1/8”
59299	1-1/4”



Chrome Footpeg Mount Bars
Measures 3-1/2” long and accepts male mount pegs and mount with 1/2” x 13 bolts.
39159



Footpeg Mount Blocks
Fits 1993-on FLT models to use with male peg sets.
59929



Chrome Hole Shot Billet Peg Set
Features male style ends.
59584 Peg set
73632 Shifter peg

Pegs & Mounts







Chrome Passenger Peg Mount
39130 XL 1982-90, uses small male pegs



T/L Chrome XL Forward Control Footrest Support
Use these brilliant chrome plated brackets to replace the stock black ones on XL 2004-on 883C and 1200C models.
61087 42705-04



XL Highway Peg Mounting Kit
Fits 1984-2003 XL models except 1999-on XL 883C and 1200C models. 6-½" Long.
63030 49159-88T



XL Hi-Way Bar Peg Sets
Chrome peg set mounts to front motor mount replacing factory type 49106-84. Includes pegs for 1986-03 883-1100-1200 XL models.

PCP	Type
39156	O-ring pegs
39158	Cats Paw pegs



Clamp-On Footpeg Sets
Clamp-on footpeg kits include 3-piece chrome frame clamps for 1-¼" tubing. They will fit all Sportster frames from 1982-12 and all 5-speed rubbermount frames.

PCP	Foot Peg Style
39110	O-ring pegs
39118	Black rubber pegs